

TABLE OF CONTENTS

Dear Customers,

This instruction manual describes the most important connections, settings, and functions for your new television.

The more detailed instruction manual is available under www.grundig.com in the "Downloads" section.

3 SET-UP AND SAFETY

- 4 Service information for dealers
- 4 Network interfaces
- 4 Disposing of the packaging
- 5 Environmental note

6 CONNECTION/PREPARATION

- 6 Connecting the antenna (socket A)
- 6 Connecting external data media (socket B)
- 7 Connecting a BluRay player or a game pad (socket C)
- 7 Inserting the CA module (slot D)
- 7 Connecting the power cord
- 7 Inserting batteries in the remote control
- 8 Remote control - main functions
- 9 Navigation in the menus
- 9 Control buttons on the TV

10 SETTINGS

- 10 Initial set-up
- 11 Initial set-up - overview
- 12 Arrange Initial set-up
- 14 Changing the Channel Editor for the digital channels

16 TELEVISION OPERATION

- 16 Basic functions
- 16 Zoom function
- 17 Zap function
- 17 Electronic TV guide (RoviGuideTM)
- 18 What is HbbTV?
- 18 Using HbbTV
- 18 Additional functions for video indexes

19 NETWORK SETUP

- 19 Network connection
- 19 Wired network
- 20 Wireless network

23 SMART Inter@ctive TV 3.0 FEATURE

- 23 SMART Inter@ctive TV 3.0 internet applications
- 24 Creating a Grundig Application Store account
- 24 Logging in with Grundig Application Store account
- 25 Grundig Application Store
- 28 Playing the video, music and image files with home network connection
- 28 Selecting the digital media server
- 28 Playback

29 USB RECORDING

- 29 Information on recording and playing television programmes
- 29 Possible limitations when using an external data medium
- 29 "Pausing" time shift programmes
- 30 Recording programmes
- 30 Programme setting for recording
- 31 Playback
- 31 Deleting programmes from the recorded files menu

32 USB OPERATION

- 32 File formats
- 32 The file browser
- 33 Playback basic functions

34 WIRELESS SCREEN SHARE (LIVESHARE)

- 34 What is LIVESHARE?

35 INFORMATION

- 35 Product plug
- 35 Other data

SET-UP AND SAFETY

Please note the following information when setting up your television set.

- This television set is designed to receive and display video and audio signals. Any other use is strictly prohibited.
- Best viewing distance is 5 times the diagonal length of the screen.
- External light falling on the screen impairs picture quality.
- To assure sufficient ventilation make sure there is enough space around the television set in the wall unit.
- The television set is designed for use in indoors. If you do use it at outdoors, please ensure that it is protected from humid environments such as rain or splashing water as these will create risk of safety.
- Never use the television set in humid environments.
- Do not put objects containing liquid such as vase on the television set. The liquid in it may spill and cause risk of safety.
- Place the television set on a solid, level surface.
- Do not place objects such as newspapers on the television set or cloth or similar items beneath it.
- Do not place the television set close to heating units or under direct sunlight, as this will impair cooling.
- Higher ambient temperature will shorten the service life of the television set.
- Do not open the television set under any circumstances. Safety risk may arise and also the guarantee of the product can be void if the television set is opened.
- Make sure that the power cord or the AC/DC adaptor (if supplied) is not damaged.
- Television set can only be operated with the power cable or the AC/DC adapter supplied with the product.
- If the mains plug of the television is grounded, always make sure that it is connected to a grounded socket.
- Plug the device into the mains socket only after you have connected the external devices and the antenna.
- Make sure that the mains plug/socket of the television is comfortably accessible.
- Do not connect any other equipment while the device is switched on. Switch off the other equipment as well before connecting it.
- Thunderstorms are a danger to all electrical devices. Even if the television is switched off, it can be damaged by a lightning strike to the mains or the antenna cable. Always disconnect the mains and antenna plugs during a storm.
- Clean the television screen and cabinet with a soft and dry or slightly damp cloth. Do not use wet cloth or detergent (glass cleaners, cologne and all cleaning agents alike). Only use plain water to dampen the cloth.
- When deciding where to install the television set, do not forget that most furniture surfaces are coated with various types of lacquer or plastic which contain chemical additives. These may cause corrosion to the feet of the television, thus resulting in stains on the surface of the furniture.
- Screen of your LCD/LED television conforms to the highest quality standards and has been controlled with regard to pixel faults.

- Despite the great care taken in manufacturing, technological reasons make it impossible to completely discount the possibility that some pixels may be faulty. Provided they are within the thresholds specified by the DIN norm, pixel faults of this kind cannot be regarded as a defect as defined by the warranty.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.

- Please use your television at a location as far as possible from cellular phones, microwave ovens and similar devices operating with high frequency waves. Otherwise your television may malfunction because of such radio waves.
- Do not expose the batteries to excessive heat such as direct sunlight, fire, etc.
- Do not use old and unused batteries together.
- Only replace the exhausted batteries with those having the same model, value and properties.
- By ensuring proper disposal of these batteries, you will have contributed in prevention of potential hazards on the environment and human health that may arise from inappropriate disposal of the batteries.
- Warning About the Device Package:
The package of the product can be recycled. Please ensure that the packaging is disposed separately conforming with the local regulations to make sure that the product packaging is recycled environmentally.

Caution:

- If you want to use a wall bracket for your television, make sure you read the assembly instructions for the wall bracket carefully or have your specialist dealer mount it for you.
- When buying the wall bracket, make sure that all the fastening points needed on the television are there on the wall bracket and that they are all used when it is mounted.
- If wall hanger is not going to be used, use your television only with the stand supplied in the box. As your television may tipover without a stand or with a different stand, this will create risk of safety.

Things to do for energy saving

- Do not leave your television turned on if you are not watching it; switch it to standby. If you will not use your television for a long time, leave it in off mode by switching off from the mains (if any) or by unplugging.
- Prevent surrounding noises in the room where you watch your television. Keeping the volume of your television at regular levels will help you to save energy.
- When determining the position of your television, try to place it so that the sunlight will not fall directly onto the screen of the television but will come from behind of it. Thus, you can use your television without increasing the contrast setting and save energy.

Service information for dealers



This product complies with European Union directives and regulations below:

2006/95/EC: Electrical equipment directive for use within certain voltage limits.

2004/108/EC: Directive relevant for electromagnetic suitability.

2009/125/EC: Directive and relevant for eco-design for products using energy as well as its following sub-directives;

278/2009: Regulation regarding eco friendly design requirements regarding energy consumption of uncharged external power sources and average active efficiency (for models with AC/DC adapters);

642/2009: Regulation regarding eco friendly design requirements for televisions.

2010/30/EU: Directive regarding Energy Labelling of Energy-Related products as well as its following sub-directives; 1062/2010: Regulation regarding energy labelling of televisions.

2011/65/EU: Directive on limitations on use of certain hazardous materials on electric, electronic domestic and office equipment.

1999/5/EC: Regulations on Radio and Telecommunications Terminal Equipment.

To receive a copy of declaration of compliance (DoC) visit:

<http://www.grundig.com/download/doc> . You can access the declaration of compliance by running your television model on the product model search section by entering the model number on the cover of the user's manual.

Notes for customers: The following information is only applicable for devices that are sold in the countries enforcing EU regulations.

TV's wireless system can only be used in the countries given in the table below.

AT	BE	BG	CH	CY	CZ	DE	DK
EE	ES	FI	FR	GB	GR	HU	IE
IS	IT	LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI	SK	TR

This device can also be operated in the countries outside Europe.

For the customers in Italy;

Public use is subject to service provider's permission.

For the customers in Norway;

Radio equipment use is not allowed in a graphical area within 20 km diameter of Ny-Alesund, Svalbord.

For the customers in Turkey;

This device's WLAN (Wifi) feature is only used indoors. In Turkey, outdoor use is not allowed. Make sure WLAN (Wifi) feature is closed when using outdoors.

For the customers in Russia;

Short Range Device with FHSS Modulation Applications.

Maximum 2.5 mW e.i.r.p.

for collecting telemetry information for automatic tracking and source calculation systems, 100mW e.i.r.p is the maximum allowed short range device density value permitted for use on outdoor applications without any limitation on installation height. For uses with other purposes, this applies to outdoor application in which this value does not exceed 10m above the ground.

Short range device density for indoor applications is 100mW e.i.r.p maximum.

Short range device applications with broadband modulation with DSSS and other than FHSS.

The maximum average density value for short range device applications with broadband modulation with DSSS and other than FHSS is 100mW e.i.r.p.

For only the purpose of compiling telemetry data for automatic monitoring and source estimation systems, maximum short range device allowed to be used in outdoor applications is 20 mW/MHz or 100 mW e.i.r.p.

Maximum density value for indoor use of short range devices is 10mW/MHz or 100 mW e.i.r.p.

For the customers in Ukraine;

Maximum short range device density value for indoor uses, along with internal antenna with 6 dBi amplification factor, is 100 mW e.i.r.p.

Network interfaces

This product is intended for connection to the ADSL network.

Disposing of the packaging

The packing materials are dangerous for children. Keep the packing materials out of the reach of children.

The packing of your product is manufactured from recyclable materials. Dispose by classifying in accordance with waste instructions. Do not dispose along with normal household waste.

Environmental note



This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not dispose of the product with normal household waste at the end of its life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please find out about collection points operated by your local authorities.

Help protect the environment by recycling used products.

Licence

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks and DTS Studio Sound is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

Manufactured under license from Dolby Laboratories.

 
Dolby and double D symbols are trademarks of Dolby Laboratories.

Notes on still images

Watching the same image for a long time on the screen may cause a still image remain feebly on the background. Feeble image(s) on the background is originated from LCD/LED technology and does not require any action under guarantee. To avoid such cases and/or minimize the impact, you may observe the tips below.

- Do not allow the same TV channel to stay on the screen for a very long time. Channel logos may cause this situation.
- Do not allow the images, which are not full screen, to constantly stay on the screen; if not streamed in full screen format by the broadcaster, you can convert the images to full screen by changing picture formats.
- Higher brightness and/or contrast values will lead this impact to appear faster; therefore, you are recommended to watch your TV in the lowest brightness and contrast levels.

CONNECTION/PREPARATION

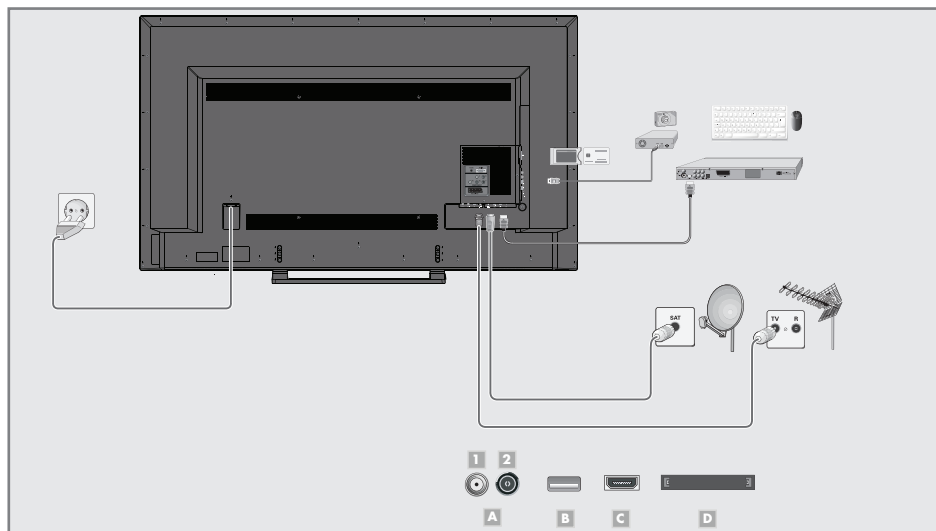

Connecting the antenna (socket A)

- 1 To receive digital satellite channels (DVB-S), connect the satellite antenna cable to the antenna socket »**SATELLITE**« on the television set;
and / or
- 2a To receive terrestrial digital broadcasters (DVB-T) connect the cable for the rooftop or indoor antenna (passive or active indoor antenna with its own power supply) to the antenna socket »**ANT IN**« on the television set;
or
- 2b To receive digital cable channels (DVB-C) connect the cable for the rooftop antenna to the antenna socket »**ANT IN**« on the television set;
or
- 2c To receive analogue TV channels, connect the cable for the rooftop antenna to the antenna socket »**ANT IN**« on the television set.

Note:

- When connecting an indoor antenna you may have to try it out at different positions until you get the best reception.

Connecting external data media (socket B)

- 1 Plug the external hard disk to the »**USB 3.0**« USB interface of the television;
or
plug the memory stick in one of the »**USB**« sockets of the television.

Notes:

- Both sockets »**USB**« of the television supports 500 mA current according to the USB standard. Devices such as external hard disk and etc. that consume more power can only be connected to the »**USB 3.0**« USB interface of the television.
- External data media may not be disconnected from the television while files on the data medium are being accessed.
- You can also connect a USB keyboard with mouse to the sockets »**USB**«.

CONNECTION/PREPARATION

Connecting a BluRay player or a game pad (socket C)

- 1 Connect the »HDMI1 (MHL)«, »HDMI2«, »HDMI3« or »HDMI4 (ARC)« socket on the television and the corresponding HDMI socket on the BluRay player or the game pad using a standard HDMI cable.

Inserting the CA module (slot D)

Note:

- Switch off the device before inserting the CA module in the »CI1« or »CI2« slot.

- 1 Insert the smart card into the CA module.
- 2 Insert the CA module with the smart card into the »CI1« or »CI2« slot on the television.

Note:

- To see which CA module is in the Common Interface slot, go to the »CA - Module« submenu.
- When you insert a CA module into the CI slot on the television for the first time, wait a few moments until the television has registered the CA module.

Connecting the power cord

- 1 Plug the power cord into the wall socket.

Note:

- Only plug the device into the mains socket after you have connected the external devices and the antenna.
- Do not use an adapter plug or extension cable which does not meet the applicable safety standards. Do not make changes on the power cord.

Inserting batteries in the remote control

- 1 Open the battery compartment by removing the lid.
- 2 Insert the batteries (2 x 1.5 V micro; for example R03 or AAA). Observe the polarity (marked on the base of the battery compartment).
- 3 Close the battery compartment.

Note:

- If the television no longer reacts properly to remote control commands, the batteries may be flat. Be sure to remove the exhausted batteries from the battery compartment.
- The manufacturer accepts no liability for damage resulting from used batteries.

 
Environmental note

-  This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

Batteries, including those which contain no heavy metal, may not be disposed of with household waste. Please dispose of used batteries in an environmentally sound manner. Find out about the legal regulations which apply in your area.

OVERVIEW

Remote control - main functions

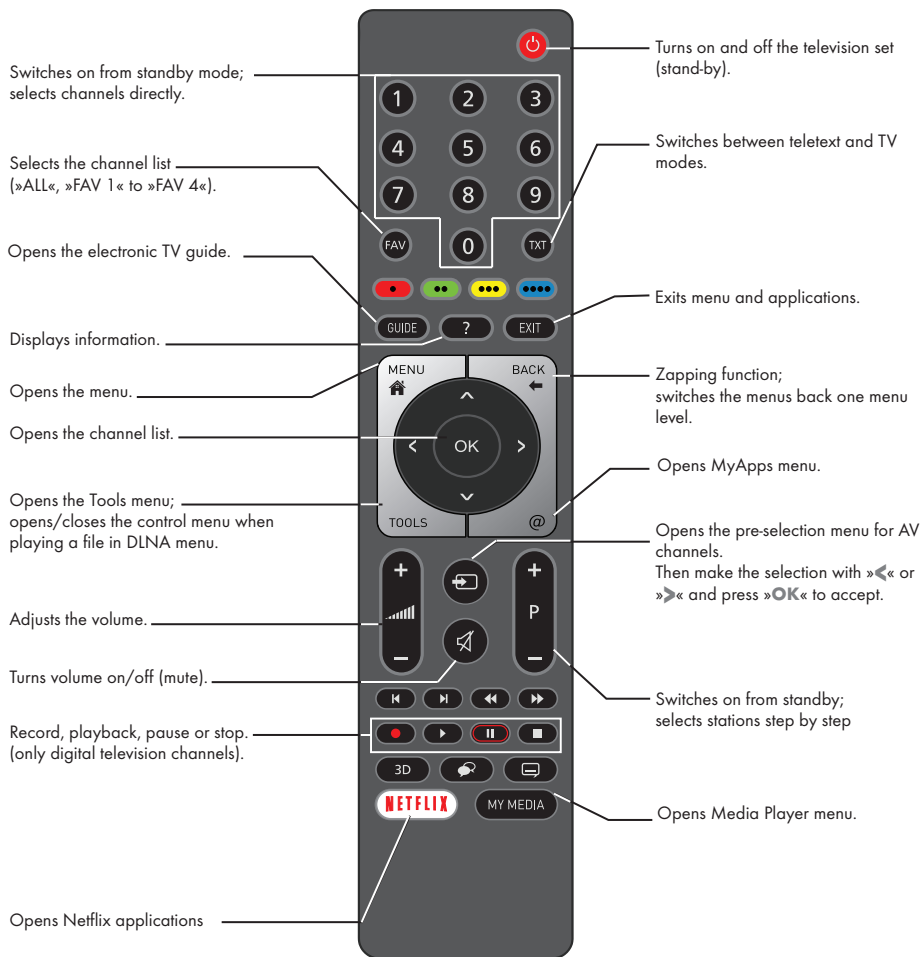

Cursor Control



Moves the cursor up and down in the menus.

Moves the cursor left/right in menus.

Opens channel list; activates various functions.

OVERVIEW

Navigation in the menus

The main menu and submenus for your television enable you to select many functions and carry out all required settings.

You access the main menu with »MENU« and select the submenus using »▶« or »◀«. To activate the required submenu, press »OK«.

Select the settings using »▼« oder »▲«. To activate the setting, press »OK«.

 
To return to the previous menu level, press »BACK ◀« and to hide the menu, press »EXIT« again.

Example, setting the Picture Mode


- 1 Open the menu with »MENU«.
 - The main menu appears.



- 2 Activate the menu item »Settings« with »OK«.
- 3 Activate the menu item »Picture Settings« with »OK«.
 - »Picture Settings« menu is displayed.

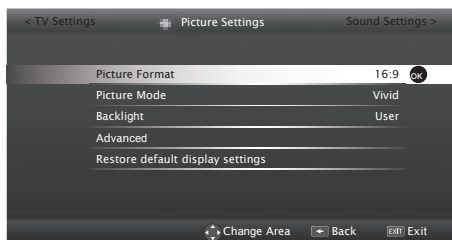

 - 4 Select the required line »Picture Mode« with »▼« or »▲« and press »OK« to confirm.
- 5 Select Picture Mode with »◀« or »▶«.

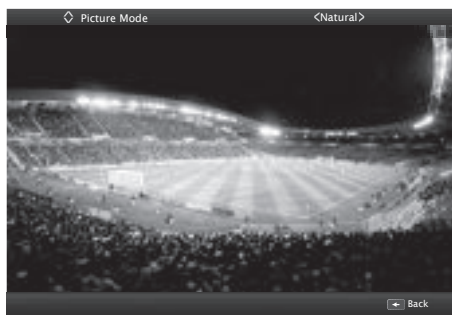

- 6 Press »BACK ◀« to return to »Picture Settings« menu, or press »EXIT« to end the setting.

Multi function switch

Using the multi function switch »⏻/I/SEL« on the television different settings can be made.

There may be no menus visible on the screen.

Pressing the switch, switches in the television from standby mode.

In operation: Pressing the switch displays the navigation menu.

Moving the switch up or down selects the desired menu item:

- Set to Volume Navigation;
- Set to Channel Navigation;
- Open Input Source Menu;
- Go to Standby.

Access function/setting by pressing.

Moving the switch up/down selects the function/setting.

Initial set-up

The Television is fitted with an "installation assistant", which guides you step by step through the basic settings.

Using the screen dialogue, the user guide enables supposedly complex settings and data entries to be presented simply and clearly for everybody.

Pages and dialogue items appear on the screen, which identify the subsequent and likely operating steps.

To support this, you will also see the required button symbols of the remote control.

The basic settings in detail:

- language selection
- country selection;
- choice of user mode;
- network settings (if desired);
- Station settings (DVB-S, DVB-T, DVB-C and analogue channels).

The detailed settings can be found on pages 12 till 13.

Settings for connecting to the home network

Depending on the connection to the home network, you connect your television to the home network:

- via a LAN connection or
- without cable via WLAN

There are two options with the LAN-connection:

Automatic connection,

all data regarding connection settings (»IP Address«, »Netmask«, »Gateway« and »DNS«) are obtained from modem automatically.

Manual connection,

all data regarding connection settings (»IP Address«, »Netmask«, »Gateway« and »DNS«) must be configured manually.

There are various options when using **WLAN**:

Automatic connection,

all data regarding connection settings (»IP Address«, »Netmask«, »Gateway« and »DNS«) are obtained from modem automatically.

Depending on the router, you can use the following options:

- Option "WPS-PBC" (Push Button Configuration);
- Connecting with a WPS PIN;
- Connecting by entering the network password.

Manual connection,

all data regarding connection settings (»IP Address«, »Netmask«, »Gateway« and »DNS«) must be configured manually.

Tuning television channels

Depending on the type of antenna connected, you can decide which channels you would like the television to search for.

DVB-S - Tunes digital television channels from

the satellite, from page 13.

You have two options for this search:

- the basic installation which presets a standard selection, e.g. the satellite Astra 19.2° East; you need only start the search;
- the professional installation, which allows you to make all required settings and set parameters for your receiver system.

DVB-C - For setting up digital cable channels

see page 13.

DVB-T - For setting up digital terrestrial

channels see page 13.

 
Analogue - See "Special Settings" section in the "Detailed Manual" for searching analog television channels.

Note:

- See "Special Settings" section in the "Detailed Manual" for more information on digital television channel settings.

SETTINGS


Initial set-up – overview

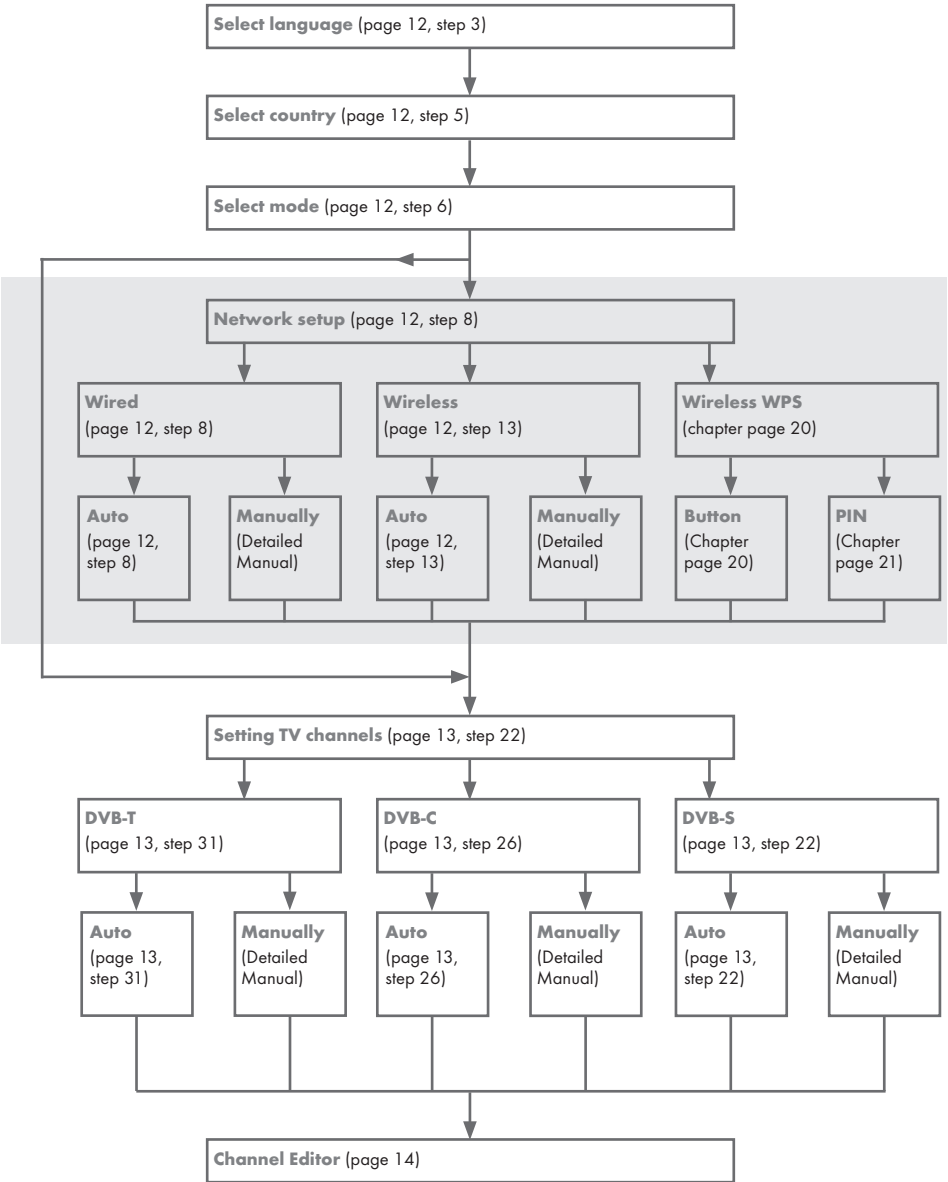

SETTINGS

Arrange Initial set-up

 - 1 Switch the television to standby with the power switch »**⏻**«.
- 2 Switch on the television from standby with »**1...0**«, »**P+**« or »**P-**«.
 - Basic Setup« menu appears when the device is switched on for the first time.

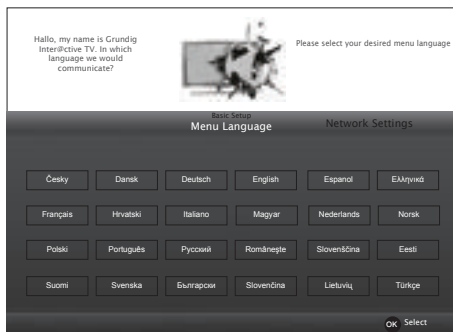

Help:

- If the »Basic Setup« menu does not appear on the screen, make the setting by following the instructions on returning the television to its factory settings (see "Detailed Manual").
- 3 Select the menu language with »**◀**«, »**▶**«, »**▼**« or »**▲**« and press »**OK**« to confirm.
 - »Welcome« menu appears.
 - 4 Step-by-step installation will be made to be able to use the television. Press »**OK**« to start the installation.
 - 5 Select the country in which the television set is operated with »**◀**«, »**▶**«, »**▼**« or »**▲**« and press »**OK**« to confirm.
 - »User Mode« menu appears, the option »Home Mode« is selected.
 - 6 Confirm the option »Home Mode« with »**OK**«;
 - or
 - select the option »Enhanced« with »**◀**« or »**▶**« and press »**OK**« to confirm.
 - »Home Mode« contains preconfigured EUP settings that provide energy savings conforming EUP.
 - »Enhanced« - if you will use the television for a demo presentation, increased image and volume settings are used in this mode. Increased mode consumes more energy.
 - 7 Press »**OK**« to confirm »Next«.
 - »Network Settings« is displayed.

Notes:

- If you want to connect your television to the home network,
 - continue at point 8 for an automatic LAN connection, or
 - continue at point 13 for an automatic WLAN connection.
- If connecting to a home network is not necessary, skip the setting using »*****« (blue). Continue settings at point 22, 26 or 31.

Connecting to a home network with a LAN cable

- 8 Press »**▼**«, the line »Change Connection Type« is selected and press »**OK**« to confirm.
- 9 Select the option »Wired« with »**◀**« or »**▶**« and press »**OK**« to confirm.

Note:

- The settings for a manual LAN connection are on "Detailed Manual".
- 10 Press »**••**« (red) to select »Connect« option to establish modem connection.
 - »Connecting ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success« messages will be displayed.
 - 11 Press »**•••**« (green) to check the performed settings and also if the local network and internet connection has been established.
 - »Testing ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success«, »Internet Connection: Success« messages will be displayed.
 - 12 To switch to »Source Setup« menu press »**•••••**« (blue).

Note:

- Continue searching for TV channels with:
 - point 22 for DVB-S reception;
 - point 26 for DVB-C reception;
 - point 31 for DVB-T reception.

Connecting automatically by entering the network password

- 13 Press »**▼**«, the line »Change Connection Type« is selected and press »**OK**« to confirm.
- 14 Select the option »Wireless« with »**◀**« or »**▶**« and press »**OK**« to confirm.
- 15 Confirm the message »Do you want to turn on Wi-Fi?« with »**••**« (green).
- 16 Select the line »Select Access Point« with »**▼**« or »**▲**« and press »**OK**« to confirm.
 - »Select Access Point« menu appears and available wireless networks are scanned and displayed in the menu.
- 17 Select the network that you want to connect with »**▼**«, »**▲**«, »**◀**« or »**▶**« and press »**OK**« to confirm.
 - Wireless connection password screen is displayed.
- 18 Select the required character with »**▼**«, »**▲**«, »**◀**« or »**▶**« and move to the next character with »**OK**«.
 - Using »**Shift**« ➡ »**OK**«, you can switch between uppercase letters / numbers and lowercase letters / special characters.
 - Select »**X**« to delete the character entered and press »**OK**« to confirm.

SETTINGS

- 19 Confirm the password with »*« (green).
- »Connecting ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success« messages will be displayed.
- 20 Press »*« (green) to check the performed settings and also if the local network and internet connection has been established.
- »Testing ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success«, »Internet Connection: Success« messages will be displayed.
- 21 To switch to »Source Setup« menu press »*« (blue).

Note:

- Continue searching for TV channels with:
 - point 22 for DVB-S reception;
 - point 27 for DVB-C reception;
 - point 32 for DVB-T reception.

Searching television channels with satellite signal (DVB-S)

- 22 Select the option »Satellite« with »◀« or »▶« and press »OK« to confirm.
- The satellite Astra 19.2° East is preset.
- 23 Confirm the push button »Next Page« with »OK«.

Notes:

- Select the Channel Type.
Press »◀« or »▶« to select whether you want to search for only digital channels (Digital) or only radio channels (Radio) or both (Digital + Radio) and press »OK« to select and mark or unmark the »Digital« and/or »Radio« items.
- Select Scan Mode.
To select whether you want to search for only free digital television channels (Free), only scrambled digital television channels (Scrambled) or both (Free + Scrambled), press »◀« or »▶« and press »OK« to select and mark or unmark the »Free« and/or »Scrambled« items.

- 24 Press »*« (red) to start searching.
- »Automatic Channel Search« menu appears and the scan for TV channels begins.
 - The scan is complete as soon as the message »Search is completed!« appears.
- 25 Select the »Channel Editor« with »*« (red).

Tuning cable digital television channels (DVB-C)

- 26 Select the option »Cable« with »◀« or »▶« and press »OK« to confirm.
- 27 Select the line »Scan Type« with »▼« or »▲«.
- Select the option »Quick« or »Full« with »◀« or »▶«.
- »Quick« scanning function sets the channels according to the cable operator information in the broadcasting signal.
 - »Full« scan function scans the entire frequency range selected. With this search option, search can take a long time. This search type is recommended. Some cable providers do not support »Quick« scan.

Note:

- You can speed up the search. To do this, frequency and network ID information are required. You may get this data from your cable operator or find it in the Internet forums.
- 28 Use »▼« to select the push button »Next Page« and confirm with »OK«.

Note:

- Perform Channel Type selection. Press »◀« or »▶« to select whether you want to search for only digital channels (Digital), only Analog channels (Analog) or both (Digital + Analog) and press »OK« to select and mark or unmark the »Digital« and »Analog« items.
- 29 Press »*« (red) to start searching.
- The »Automatic Channel Search« menu appears, and the search for TV channels begins.
 - The scan is complete as soon as the »Search is completed!« appears.
- 30 Select the »Channel Editor« with »*« (red).

Tuning terrestrial digital television channels (DVB-T)

- 31 Select the option »Air« with »◀« or »▶« and press »OK« to confirm.

Important:

- The antenna power supply (5V) may only be switched on if the antenna is an active indoor antenna with a signal amplifier and it is not already supplied with a voltage via a mains plug (or similar supply). Otherwise you may cause a short circuit and irreparably damage your antenna.
- 32 Select the line »Active Antenna Power« with »▼« or »▲«.
- Switch on the antenna power supply for the antenna with »◀« or »▶« (»On«).
- 33 Select the line »Next Page« with »▼« or »▲« and press »OK« to confirm.

Note:

- Perform Channel Type selection. Press »◀« or »▶« to select whether you want to search for only digital channels (Digital), only Analog channels (Analog) or both (Digital + Analog) and press »OK« to select and mark or unmark the »Digital« and »Analog« items.
- 34 Press »*« (red) to start searching.
- The »Automatic Channel Search« menu appears, and the search for TV channels begins.
 - The scan is complete as soon as the »Search is completed!« appears.
- 35 Select the »Channel Editor« with »*« (red).

SETTINGS

Changing the Channel Editor for the digital channels

Channels found at the end of the search are stored in the »Channel Editor«.

You can delete channels which are not required from the programme table, you can change the order of channels within the programme table and lock individual channels (Parental control).

You can also add channels to the favourites list; in addition, you can change the order of channels within the favourites list. In Channel Editor, press »P+« to switch the channel list to the next page, press »P-« to switch it back to the previous page.

 
To perform searching in the Channel Editor menu by Channel names, press »*« (red).

To display the channels in the Channel Editor menu by Antenna Type, press »*« (green) and »OK«.

To use filters and tools in the Channel Editor menu, press »*« (yellow).

Opening the Programme Table

- 1 Open the menu with »MENU«.
- 2 Activate the »Settings« menu with »OK«.
- 3 Select the option »Source Setup« with »>« or »<« and press »OK« to confirm.
- 4 Select the line »Channel Editor« with »V« or »^« and press »OK« to confirm.
 - »Channel Editor« menu is displayed.

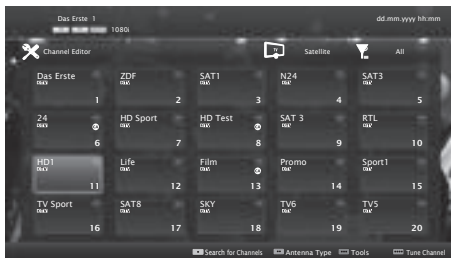

Important:

- Programme table and favourite lists are stored separately for all sources (satellite, cable and air).
- Programme table of the current source will be displayed when you select programme table.

Notes:

- A CI module and smart card is required to watch the channel if there is a »CA« sign next to the channel name in Programme Table.
- As the recorded data channels are not displayed in the channel list, number of channels displayed in the Channel list may be less than 6000

Searching channels by name in the Channel Editor

While arranging the channels in the Channel Editor, you can search and select the channel name by the first three characters.

- 1 In the »Channel Editor« menu, select the search mode by pressing »*« (red).
- 2 Select the first character of the channel name you want to search with »V«, »^«, »<« or »>« and press »OK« to confirm.
Repeat the entry for the next characters.
 - Channels found will be listed on the right side of the screen.
- 3 With »>« switch to result section, select the channel you are searching with »V« or »^«, and highlight this with »OK«.

Note:

- To change the place of, delete or add the channels to favourites lists, continue reading the relevant section.
- 4 To return to the previous menu, press »BACK«.
 - 5 To exit the »Channel Editor« menu, press »EXIT«.

Deleting channels in the Channel Editor

- 1 In the »Channel Editor« menu, select the channel(s) you want to delete with »V«, »^«, »<« or »>«, and highlight the television channel by pressing »OK«.
 - Channel is marked with »V«.
- 2 Press »*« (yellow).
 - »Tools« menu is displayed.
- 3 Select the line »Delete« with »V« or »^« and press »OK« to confirm.
- 4 To confirm deletion process, press »*« (green);
or
to cancel deletion process, press »*« (red).
- 5 To exit the »Channel Editor« menu, press »EXIT«.

Moving the channels in the channel organizer to different channel positions

- 1 In the »Channel Editor« menu, select the channel(s) you want to move with »V«, »^«, »<« or »>«, and highlight the television channel by pressing »OK«.
 - Channel is marked with »V«.
- 2 Press »*« (yellow).
 - »Tools« menu is displayed.
- 3 Select the line »Move« with »V« or »^« and press »OK« to confirm.

Notes:

- In case of changing the order of the channels, channel numbers sent by the broadcaster will be changed.
 - If more than one channel is selected for moving, channels will be moved one after the other according to the selection order of channels.
- 4 Select the new place of the channel with »V«, »^«, »<« or »>« and press »OK« to confirm.
 - 5 To exit the »Channel Editor« menu, press »EXIT«.

Displaying channels in the Channel Editor by antenna type

If you have more than one antenna type, you can display channels in the Channel Editor by antenna type.

- 1 To display the channels in the »Channel Editor« menu by antenna type, press »***« (green).
- 2 Select »Air«, »Cable« or »Satellite« with »◀« or »▶« and press »OK«.
– Television will switch to the antenna system you have selected and channels will be displayed.
- 3 To exit the »Channel Editor« menu, press »EXIT«.

Sequencing channels in the Channel Editor

You can sequence the channels in the Channel Editor according to different criteria such as TV, radio or scrambled / unscrambled.

- 1 To sequence the channels according to different criteria in the »Channel Editor« menu, press »***« (yellow).
- 2 Select the sequencing criteria you want with »▼« or »▲« and press »OK« to confirm.
– Channels will be displayed in the »Channel Editor« menu by the criteria you have selected.
- 3 To exit the »Channel Editor« menu, press »EXIT«.

Creating a list of favourites

You can select your favourite channels and save them in up to four lists (FAV1 to FAV4).

Note:

- Favourite lists must be created separately for all sources (satellite, cable and air).
- Press »FAV« to select the favorite list.

- 1 In the »Channel Editor« menu, select the channel(s) you want to add in the favorites list with »▼«, »▲«, »◀« or »▶«, and highlight the television channel by pressing »OK«.
– Channel is marked with »✓«.
- 2 Press »***« (yellow).
– »Tools« menu is displayed.
- 3 Select the line »Add to Fav.« with »▼« or »▲« and press »OK« to confirm.
– »Add to Fav.« menu is displayed.
- 4 Select the favorite list you want to add the selected channels with »▼« or »▲« and store with »OK«.
– The channels are marked in the Channel Editor with »❶«, »❷«, »❸« or »❹«.
– You can add the same channel in more than one favourites list.
– Each favourite list can contain maximum 255 channels.

Notes:

- You can delete channels from the favourites list. Press »***« (yellow), select the favorites list the channel is in with »▼« or »▲« and press »OK« to confirm. Select the channel(s) you want to delete with »▼«, »▲«, »◀« or »▶«, and highlight the channel by pressing »OK«.
Press »***« (yellow) and select the line »Remove from Fav.« with »▼« or »▲« and confirm with »OK«. The channel you have selected is now deleted from the favourites list.
 - When a channel stored in the favourite channel list is deleted channel order in the favourite list is updated.
- 5 To exit the »Channel Editor« menu, press »EXIT«.

Sorting channels in the favorites list

You can change the channel sorting in the favorites list.

- 1 To select favorites list in the »Channel Editor« press »***« (yellow).
- 2 Select the favorites list you want to sort with »▼« or »▲« and press »OK« to confirm.
– Selected favorites list channels will be displayed.
- 3 Select the channel(s) you want to move with »▼«, »▲«, »◀« or »▶«, and highlight the television channel by pressing »OK«.
– Channel is marked with »✓«.
- 4 Press »***« (yellow).
– »Tools« menu is displayed.
- 5 Select the line »Move« with »▼« or »▲« and press »OK« to confirm.

Note:

- If more than one channel is selected for moving, channels will be moved one after the other according to the selection order of channels.
- 6 Select the new place of the channel with »▼«, »▲«, »◀« or »▶« and press »OK« to confirm.
 - 7 To exit the »Channel Editor« menu, press »EXIT«.

TELEVISION OPERATION

Basic functions

Switching on and off

- 1 Press , »1...0« or »P+« or »P-« to switch on the television from standby mode.
- 2 Press  to switch the television to standby.

Selecting channels

- 1 Use »1...0« to select channels directly.
- 2 Select television channels step by step with »P+« or »P-«.
- 3 Open the channel list by pressing »OK«, select the channel list by pressing »◀« or »▶« and confirm with »OK«, then close the channel list with »EXIT«.

Notes:

- Programme information for the following days can be called up with »▲«.
- Switch to radio channels by calling up the channel list with »OK«, press »♦♦♦♦« (blue), use »◀« or »▶« to select the option »Radio«. Select radio channels with »◀« or »▶« and confirm with »OK«.
- Switch back to TV channel lists by calling up the channel lists again with »OK«, press »♦♦♦♦« (blue), using »◀« or »▶« to select the option »Digital« and confirm with »OK«.
- To save energy, you can turn off the screen in "Radio mode" (see "Detailed Manual").

Selecting stations from lists

You can select stations from various lists, (e.g. ALL, FAV1-FAV4).

- 1 Press »FAV« to recall the favorite list menu.
 - »Select Favorite« menu is displayed.
- 2 Select the channel list with »◀« or »▶« and open it with »OK«.
- 3 Select the channel with »◀« or »▶« and press »OK« to confirm.
- 4 Press »EXIT« to exit the channel list.

Selecting AV channels

- 1 Open »Select Source« menu with »«.
- 2 Select the desired AV channel position with »◀« or »▶« and confirm with »OK«.
- 3 Use »1...0« to switch back to the television channel.

Note:

- The AV preset descriptions can be changed. See "Settings" section on "Detailed Manual".

Adjusting the volume

- 1 Adjust the volume with »+  -«.

Muting

- 1 Use »« to switch the sound off (mute) and to switch it on again.

Displaying information

- 1 Display information, press »?« repeatedly.
 - The display disappears automatically after a short while.

Picture settings

- 1 Open the Tools menu with »TOOLS«.
- 2 Select the line »Picture Mode« with »▼« or »▲«.
- 3 Select the picture setting by pressing »◀« or »▶«.

Note:

- Picture setting "Game" can only be selected in »HDMI«, »Component« or »PC« modes.
- 4 Press »EXIT« to end the settings.

Audio settings

- 1 Open the Tools menu with »TOOLS«.
- 2 Select the line »Sound Presetting« with »▼« or »▲«.
- 3 Select the audio setting by pressing »◀« or »▶«.
- 4 Press »EXIT« to end the settings.

Audio language

You can select various languages when watching digital channels. This depends on the programme being broadcast.

- 1 Press »« to open the selection menu.
- 2 Select the language with »▼« or »▲« and press »OK« to confirm.
- 3 Press »EXIT« to end the settings.

Subtitles

You can select various subtitles when watching digital channels. This depends on the programme being broadcast.

- 1 Press »« to open the selection menu.
- 2 Select the language with »▼« or »▲« and press »OK« to confirm.
- 3 Press »EXIT« to end the settings.

Zoom function

With this function, you can enlarge the picture on the television.

- 1 Open the Tools menu with »TOOLS«.
- 2 Select the line »Zoom« with »▼« or »▲«.
- 3 Select zoom setting with »◀« or »▶« and confirm with »OK«.
 - Image is enlarged as center-focused.
- 4 To navigate in the enlarged picture, press »*« (red) and move the screen with »◀«, »▶«, »▼« or »▲«.
- 5 To return to the zoom menu, press »BACK «.
- 6 Press »EXIT« to end the settings.

Sleep timer

In the »Sleep Timer« menu you can enter a time for the television to switch off. After this time has elapsed, the television switches to standby mode.

- 1 Open the Tools menu with »**TOOLS**«.
- 2 Select the line »Sleep Timer« with »**V**« or »**▲**«.
- 3 Select the switch-off time with »**◀**« or »**▶**«.

Note:

- Set the function to »Off« with »**◀**« or »**▶**« to switch it off.

- 4 Press »**EXIT**« to end the settings.

Zap function

This function allows you to save the television channel which you are currently watching and switch to other channels (zapping).

- 1 Select the channel you want to save in the zap memory with »**1...0**« or »**P+**«, »**P-**« (for example, channel 1, BBC 1) and save with »**BACK** ◀«.
- 2 Change channels with »**1...0**« or »**▲**« »**V**«.
- 3 You can now use »**BACK** ◀« to switch between the saved channel (in the example, BBC1) and the channel you were watching before.
- 4 Press »**EXIT**« to quit the zap function.

Electronic TV guide (RoviGuide™)

Electronic TV guide has two operation modes: online and offline.

In the offline mode, only the broadcast information is received via broadcast.

A lot of content can be received via the Internet connection in the online mode such as, programme information, channel logos, information about players, pictures, fragments, etc.

Log on to the »RoviGuide™«

If you use the Electronic TV guide for the first time, you must log on.

- 1 Press »**GUIDE**« to start Electronic TV guide.
 - »Terms and Conditions« is displayed.
- 2 With »**V**« display Terms and Conditions, select the push button »I Agree« and press »**OK**« to confirm.
- 3 Enter the postal code with »**1...0**«.
- 4 Confirm the log on with »**OK**«.

The Electronic TV guide in Offline mode

In the offline mode, the electronic programme guide offers an overview of all programmes that will be broadcast in the next week (for digital stations only).

- 1 Press »**GUIDE**« to start Electronic TV guide.
 - A message is displayed.
- 2 Select the push button »Continue« with »**V**« and press »**OK**« to confirm.

Notes:

- Not all channels provide a detailed TV guide.
 - Many broadcasters supply the daily programme but no detailed descriptions.
 - There are broadcasters which do not provide any information at all.
- 3 Select the television channel with »**V**« or »**▲**«.
 - Information about the actual programme is displayed in the selected television channel.
 - 4 Switch to the information about the current programme using »**OK**«.

Notes:

- To call up further information about the programme press »**V**« or »**▲**« repeatedly.
- To display a small image of the programme select the »Watch« button with »**▶**« and confirm with »**OK**«.
- The programme selected can be recorded (if an external data medium is connected). To do this select the »Watch« button with »**▶**«, press »**V**« to select the »Record« button and confirm with »**OK**«. Confirm the display with »**OK**«.
- To add the programme selected to the reminder timer select the »Watch« button with »**▶**«, press »**V**« to select the »Remind« button and confirm with »**OK**«. Confirm the display with »**OK**«.

NETWORK SETUP

To use the functions "GRUNDIG APPLICATION store" and "Operation with Digital Media Server", you must connect the television to your home network with internet access and log on.

Grundig Application Store is a depot where you can find various applications that you may use on your Grundig TV. You can download many applications from Grundig Application Store. These applications include video, picture, music, social networking applications, news and sports applications, weather forecast applications and some specific applications.

Your TV supports remote control feature for Apple iPhones, Android and Windows based phones. Depending on the features of your phone, you may control your TV by your phone after downloading the free »GRUNDIG TV Remote« application from Apple App Store, Google Play (Android Market) or Windows Phone Store.

Network connection

You can establish a wired or wireless connection between your television and the local network.

If you want to use a wired network connection, please start with the instructions here:

If you use a wireless network connection, please follow the instructions in the "Wireless network connection" section on page 20.

Note:

- The following section describes connecting to the home network if you did not carry this out during the "initial set-up".

 
Wired network

Wired network connection

- 1 Connect the output of external modem to »LAN« socket with Cat 5 cable.

Note:

- Connection cables are not supplied.

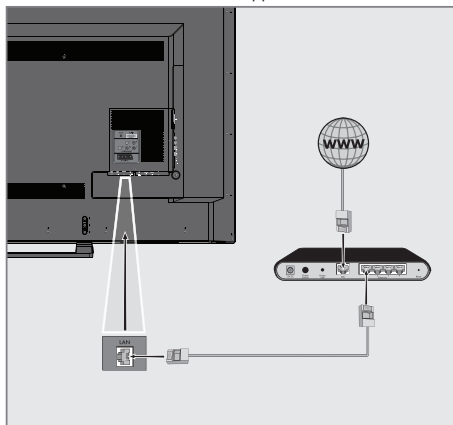

Wired network settings

 
There are two ways of making the wired network settings.

- A Automatic connection,
All data regarding connection settings (»IP Address«, »Netmask«, »Gateway« and »DNS«) are obtained from modem automatically.
- B Manual connection,
all data regarding connection settings (»IP Address«, »Netmask«, »Gateway« and »DNS«) must be configured manually.

Automatic connection

Most of the home networks are Dynamic. If you have a dynamic network, you must use a DSL modem that supports DHCP. Modems and IP sharers that support DHCP obtain the »IP Address«, »Netmask«, »Gateway« and »DNS« values required for internet access automatically, and thus you are not required to enter those values manually.

- 1 Open the menu with »MENU«.
- 2 Activate the menu item »Settings« with »OK«.
- 3 Select the menu item »Network Configuration« with »>>« or »<<« and press »OK« to confirm.
 - »Network configuration« menu is displayed.

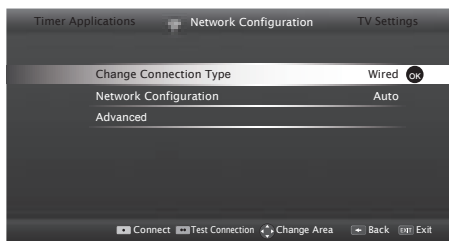


- 4 Select the line »Change Connection Type« »<<« or »>>« and press »OK« to confirm.
- 5 Select the option »Wired« with »<<« or »>>« and press »OK« to confirm.
- 6 Select the line »Network Configuration« with »<<« or »>>« and use »<<« or »>>« to select »AUTO«.
- 7 With »*« (red) select »Connect« to establish modem connection.
 - »Connecting ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success« message will be displayed.
- 8 Press »**« (green) to check the performed settings and also if the local network and internet connection has been established.
 - »Testing ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success«, »Internet Connection: Success« message will be displayed.
- 9 Press »EXIT« to end the settings.

Note:

- If you do not have a dynamic network, follow the instructions in manual connection section (see "Detailed Manual").

NETWORK SETUP

 Wireless network

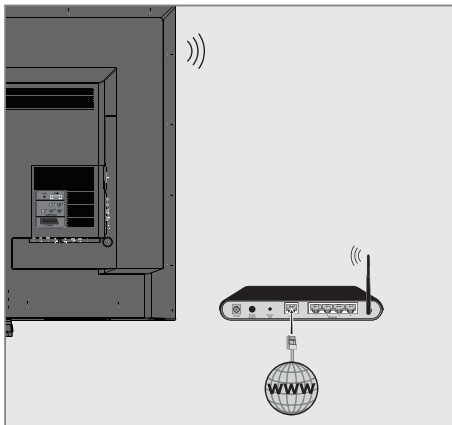

Wireless network connection

There are different ways of making the wireless network settings. »Wireless« and »Wireless WPS« (WiFi Protected Setup).

- 1 Television includes a built-in Wireless WiFi Adapter to connect it to wireless network.

Notes:

- Wireless LAN adapter supports IEEE 802.11B/G and N communication protocols. We recommend you to use IEEE 802.11N protocol to obtain the best performance in wireless HD video playback.
- If you use a modem that supports IEEE 802.11B/G, video playback performance may be poor when compared to a modem that supports IEEE 802.11N since the data transfer rate of IEEE 802.11B/G protocol is lower.
- Please note that video playback performance in a DLNA application on a wireless local network and in a SMART Inter@tive TV 3.0 application on a network with internet connection depends on the number of users on the network as it is the case in every wireless network.
- It is recommended to switch off the equipment that are not in use in home network in order to avoid unnecessary network traffic.
- Placing the modem or wireless network sharer on an elevated location will increase the wireless connection reception strength.
- Wireless connection reception strength may vary depending on the type of the modem and the distance between the modem and television.

Wireless network settings

You have several ways to connect your TV to your home network.

 
- A Automatic connection,**
all data regarding connection settings (»IP Address«, »Netmask«, »Gateway« and »DNS«) are obtained from modem automatically.
Depending on the router, you can use the following options:
 - Option "WPS-PBC" (Push Button Configuration);
 - Connecting with a WPS PIN;
 - Connecting by entering the network password.
- B Manual connection,**
all data regarding connection settings (»IP Address«, »Netmask«, »Gateway« and »DNS«) must be configured manually.

Technical requirements

Most of the home networks are Dynamic. If you have a dynamic network, you must use a DSL modem that supports DHCP. Modems and IP sharers that support DHCP obtain the »IP Address«, »Netmask«, »Gateway« and »DNS« values required for internet access automatically, and thus you are not required to enter those values manually.

Wireless WPS network connection through by pressing a button

- 1 Open the menu with »MENU«.
- 2 Activate the menu item »Settings« with »OK«.
- 3 Select the menu item »Network Configuration« with »>>« or »<<« and press »OK« to confirm.
 - »Network configuration« menu is displayed.
- 4 Select the line »Change Connection Type« with »V« or »^« and press »OK« to confirm.
- 5 Select the option »Wireless WPS« with »<<« or »>>« and press »OK« to confirm.
 - WiFi warning screen will be displayed.
- 6 Activate WiFi with »***« (green).
- 7 Select the line »WPS Type« with »V« or »^« and select the option »Push Button« with »<<« or »>>«.

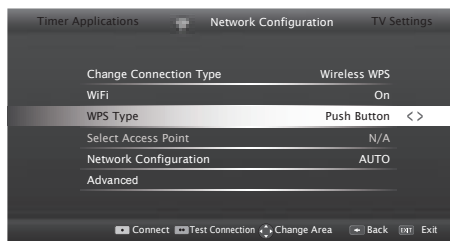


- 8 With »*« (red) select »Connect« to establish modem connection.
 - »Push the WPS button on your Access Point« message is displayed.
- 9 Press the WPS button on the router.

NETWORK SETUP

- 10 To continue after pressing the WPS button on the access point, press »***« (green).
 - The "Connection to Gateway: Success" message will be displayed.
- 11 Press »***« (green) to make sure that the network connection is established with the current settings.
 - »Testing ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success«, »Internet Connection: Success« messages will be displayed.
- 12 Press »EXIT« to end the setting.

Wireless WPS network connection with PIN

 - 1 Open the menu with »MENU«.
- 2 Activate the menu item »Settings« with »OK«.
- 3 Select the menu item »Network Configuration« with »>>« or »<<« and press »OK« to confirm.
 - »Network configuration« menu is displayed.
- 4 Select the line »Change Connection Type« with »V« or »^« and press »OK« to confirm.
- 5 Select the option »Wireless WPS« with »<<« or »>>« and press »OK« to confirm.
 - WiFi warning screen will be displayed.
- 6 Activate WiFi with »***« (green).
- 7 Select the line »WPS Type« with »V« or »^« and select the option »PIN« with »<<« or »>>«.

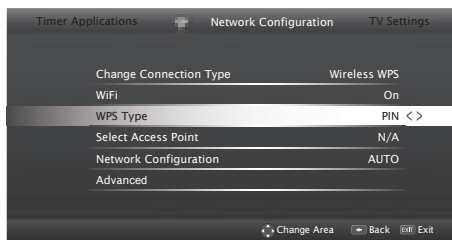

- 8 Select the line »Select Access Point« with »V« or »^« and press »OK« to confirm.
 - Present WPS-supported wireless networks are scanned to display in the »Select Access Point« menu.
- 9 Select the network that you want to connect with »V«, »^«, »<<« or »>>« and press »OK« to confirm.
 - 8-digit pin code is displayed in the wireless WPS menu.

Note:

- Refer to the manual of your router to find out how the PIN is entered via a PC.

- 10 Use a PC to enter the pin on the router (e.g. AVM FRITZ!Box: menu item WLAN Settings... WPS) and save.

Note:

- The 8-digit PIN code must be entered in the modem interface in 2 minutes; otherwise, connection of television with the modem is cut.

 
- 11 Press »***« (green) to confirm the registration.
 - The message "Connection to Gateway: Success" appears.

- 12 Press »***« (green) to check the performed settings and also if the local network and internet connection has been established.
 - »Testing ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Successfull«, »Internet Connection: Successfull« messages and MAC address will be displayed.
- 13 Press »EXIT« to end the setting.

Connecting automatically by entering the network password

Use this method for establishing a connection if your router does not support "WPS-PBC" or WPS PIN entry.

- 1 Open the menu with »MENU«.
- 2 Activate the menu item »Settings« with »OK«.
- 3 Select the menu item »Network Configuration« with »>>« or »<<« and press »OK« to confirm.
 - »Network configuration« menu is displayed.

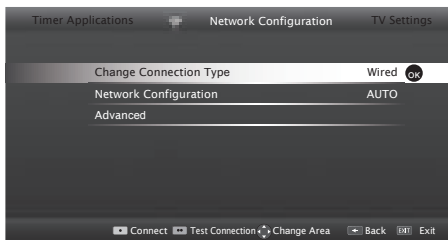

- 4 Select the line »Change Connection Type« with »V« or »^« and press »OK« to confirm.
- 5 Select the option »Wireless« with »<<« or »>>« and press »OK« to confirm.
 - WiFi warning screen will be displayed.
- 6 Activate WiFi with »***« (green).
- 7 Select the line »Network Configuration« with »V« or »^« and select the option »AUTO« with »<<« or »>>«.
- 8 Select the line »Select Access Point« with »V« or »^« and press »OK« to confirm.
 - »Select Access Point« menu is displayed by scanning available wireless networks.
- 9 Select the network that you want to connect with »V«, »^«, »<<« or »>>« and press »OK« to confirm.
 - Wireless connection password screen is displayed.

Note:

- For device to discover the wireless modem on the network, the network name should support ASCII characters.

- 10 Select the required character with »V«, »^«, »<<« or »>>« and move to the next character with »OK«.
 - Using »Shift« = »OK«, you can switch between uppercase letters / numbers and lowercase letters / special characters.
 - Select »<<<« to delete the character entered and press »OK« to confirm.

NETWORK SETUP

- 11 Confirm the password with »*« (green).
 - »Connecting ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success« messages will be displayed.
- 12 Press »*« (green) to check the performed settings and also if the local network and internet connection has been established.
 - »Testing ... Please wait« message will be displayed, and if the connection is established »Connection To Gateway: Success«, »Internet Connection: Success« messages will be displayed.
- 13 Press »EXIT« to end the setting.

Note:

- If you do not have a dynamic network, follow the instructions in manual connection section (see "Detailed Manual").

SMART INTER@CTIVE TV 3.0 FEATURE

SMART Inter@ctive TV 3.0 internet applications

Smart Inter@ctive TV 3.0 interactive applications provide your television with Internet services and pages.

These applications are designed according to your television.

With SMART Inter@ctive TV 3.0 feature you can run many local and global internet applications. Thanks to Grundig Application Store, you can find many applications that you may use on your Grundig TV. You can download many applications from Grundig Application Store. These applications include video, picture, music, social networking applications, news and sports applications, weather forecast applications and some specific applications.

Notes:

- Availability of SMART Inter@ctive TV 3.0, inter@ctive applications may vary from one country to the other.
- Smart Inter@ctive TV 3.0 cannot download and save files, cannot upload files to a web site and cannot install add-ins except Login pages of some applications for applications other than the ones in Grundig Smart Apps.
- Grundig is not responsible for the content and the quality of content offered by the content providers.
- Local and global internet applications provided through your Smart Inter@ctive TV 3.0 comes with your TV within the framework of special limited duration agreements entered into with the application owners. Application owners may update, modify, restrict or entirely remove those applications with their own decision. Grundig cannot be held responsible for such changes.
- Grundig reserves the right to make all changes such as modifications, restrictions, extensions, transfers and removals on internet applications provided through your SMART Inter@ctive TV 3.0.
- In Login process of some applications, it may be required to connect to the web page of the related application. Subject web pages may contain links not related to Login process. When connecting those links, TV may access open web and view contents that are not supported by your TV. As you are on open web, your TV cannot control those unsupported contents or cannot be held responsible for them.

Starting Smart Inter@ctive TV

- 1 Open the menu with »MENU«.
- 2 Select the menu item »Applications Store« with »◀« or »▶« and press »OK« to confirm
 - »Inter@ctive Applications« menu will be displayed.
 - During initial login, registration screen for GRUNDIG Application Store will be displayed.

Notes:

 
- If you press »@« when no menu is open, you can access »Quick Apps« menu.
- If you attempt to start Inter@ctive applications without a cable or wireless adapter connected, the related warning is displayed on the screen. If your wired or wireless adapter is connected but you cannot receive IP or internet is not connected, the Inter@ctive applications cannot be started. In this case, check Network connection settings. see. page 19 or 20.

USB keyboard and mouse

You may connect a keyboard or mouse to both sockets »USB« or socket »USB3.0« to use in the Web browser. Keyboards and mice requiring special drive are not supported.

Navigation and entering text during registration

- 1 Press »@« to open »MyApps« menu.
 - Grundig Smart Apps registry screen is displayed.

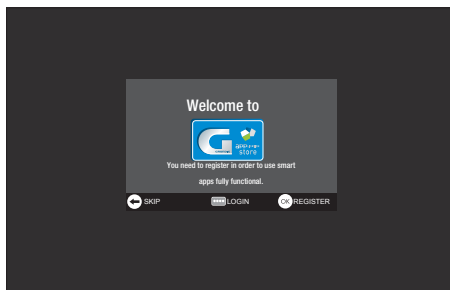

- 2 Press »OK« to start registration.
- 3 Select necessary text areas with »▼«, »▲«, »◀« or »▶« and press »OK« to confirm.
 - Virtual keyboard will be displayed.

Notes on data entry:

- Press »***« (green) for keyboard language.
- Data will be entered through virtual keyboard. Select necessary letters/numbers and press »OK« to confirm.
- For upper/lower case, select »Shift« and press »OK« to confirm.
- Press »*« (red) to switch to mobile keyboard.
- Press »*****« (blue) to delete last character/number. Press »*****« (yellow) to delete all characters.
- When entry is complete, use »▼«, »▲«, »◀« or »▶« to select »◀« option and press »OK« to confirm.
 - Virtual keyboard will disappear.

SMART INTER@CTIVE TV 3.0 FEATURE

Creating a Grundig Application Store account

You must register to access all applications in Grundig Application Store.

- 1 Press »@« to open »MyApps« menu.
– Grundig Smart App registry screen is displayed.
- 2 Press »OK« to start registration.
- 3 Enter your »Name« and »Surname«:
Select the letters for the information with »V«, »^«, »<« or »>« and confirm with »OK«. After you've entered the data, use »V«, »^«, »<« and »>« to select »<« and press »OK« to confirm.
Press »V« for the next line and press »OK« to display the keyboard.
To pass to next screen press »****« (blue), to display keyboard press »OK«.

Note:

- Press »*« (red) to display the previous screen.
- 4 Enter your E-mail address:
Enter the data, use »V«, »^«, »<« and »>« to select »<« and press »OK« to confirm.
To pass to next screen press »****« (blue), to display keyboard press »OK«.
 - 5 Enter password and accept:
Select the letters for the information with »V«, »^«, »<« or »>« and confirm with »OK«. After you've entered the data, use »V«, »^«, »<« and »>« to select »<« and confirm with »OK«.
Press »V« for the next line and press »OK« to display the keyboard.
To pass to next screen press »****« (blue), to display keyboard press »OK«.
 - 6 Enter location:
Enter the data, use »V«, »^«, »<« and »>« to select »<« and press »OK« to confirm. To pass to the next screen press »****« (blue), and press »OK« to display the keyboard.
 - 7 Enter telephone number (optional):
Enter the data, use »V«, »^«, »<« and »>« to select »<« and press »OK« to confirm.
 - 8 To complete registration process press »****« (blue).
 - 9 Press »OK« to read and accept conditions of use.
– »Inter@ctive Applications« menu will be displayed, and standard applications will be downloaded and installed to your TV.

Logging in with Grundig Application Store account

If you reset your television to factory settings for any reason with »Save installed applications« unselected, all applications you have downloaded will be deleted, and when you access »Inter@ctive Applications« menu, the registration screen will be displayed again.

You can log-in again with the e-mail and password you have provided during Grundig Application Store registration without the need for re-registration.

- 1 Press »@« to open »MyApps« menu.
– Grundig Smart App registry screen is displayed.
- 2 To login press »****« (blue).
- 3 Enter your E-mail address:
Enter the data, use »V«, »^«, »<« and »>« to select »<« and press »OK« to confirm.
- 4 Enter your Password:
Enter the data, use »V«, »^«, »<« and »>« to select »<« and press »OK« to confirm.

 
Note:

- Press »****« (yellow) if you forget your password. Your new password will be e-mailed to you. Enter the new password.
- 5 To login press »****« (blue).
– »Conditions of Use« shall be displayed.
 - 6 Press »OK« to accept conditions of use.
– An information is displayed. You can choose, if you want restore your applications or if you want download the default applications.
 - 7 Select the desired line with »V« or »^« and press »OK« to confirm.
– The »GRUNDIG application store« menu is displayed and the standard applications are loaded.
 - 8 An information message will be displayed in a short while, accept with »OK«.

SMART INTER@CTIVE TV 3.0 FEATURE

Selecting internet applications

- 1 Press »@« to open »MyApps« menu.
 - My Apps menu will be displayed.

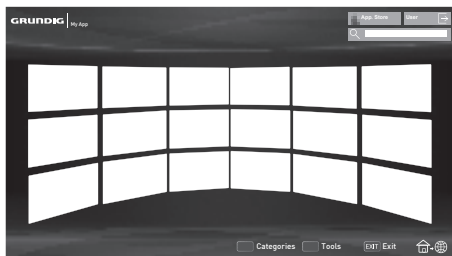

- 2 Select the required application with »V«, »^«, »<« or »>« and press »OK« to confirm.
 - Main menu of the application will be displayed after a short while.

Notes:

- When you attempt to start any application without a cable or wireless network connection, the related warning is displayed on the screen.
- Applications will not start if your cable is disconnected or you do not have an IP even if you're connected to a network or you do not have internet access. In this case, check Network connection settings. See. page 19 or 20.

Grundig Application Store

Grundig Application Store is an online depot where you can download many applications that you may use on your TV.

Some applications in the »MyApps« menu are loaded in your device as factory settings.

You can download a wide array of applications from Grundig Application Store.

- 1 Press »@« to open »MyApps« menu.
- 2 To enter »Grundig Application Store«, select the push button »Online Store« with »V«, »^«, »<« or »>« and press »OK« to confirm.
 - »Grundig Application Store« menu is displayed.

 
Downloading and installing internet applications

- 1 Select the desired category in Grundig Online Applications with »V« or »^« and press »>« to pass to application field;
or
select the application you want with numeric buttons.
 - »1« - »Most Popular«,
 - »2« - »Highest Rated«,
 - »3« - »Release Date«;or
press »**« (green) to select the application by searching the application by name.
- 2 Select the application you want to download with »V«, »^«, »<« or »>« and press »OK« to confirm
 - Information on the application will be displayed.
- 3 To download and install application press »***« (blue).
 - Application will be downloaded and installed.
- 4 To start application press »OK«;
or
to continue installing application press »BACK <<«.

SMART INTER@CTIVE TV 3.0 FEATURE

Smart Inter@ctive TV 3.0 browser main menu

- 1 Applications.
- 2 Push button to the Application store.
- 3 Search bar.
- 4 Categories menu.
- 5 Tools menu.
- 6 Exit.

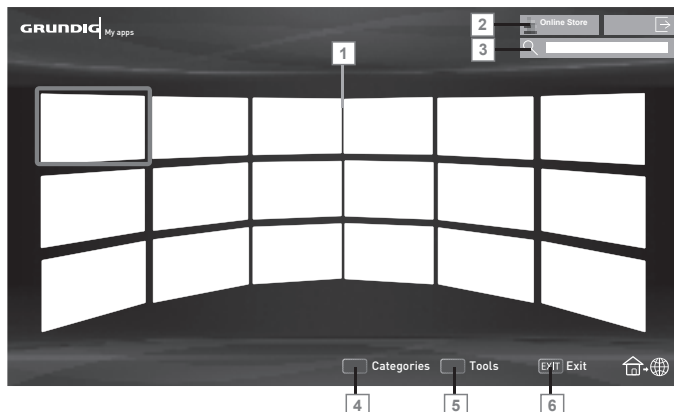

Navigating in the main menu

- 1 Press »*« (red) button in »My apps« menu and select categories with »◀« or »▶«.
- 2 Select the required application with »▼«, »▲«, »◀« or »▶« and press »OK« to confirm.
– Main menu of the application will be displayed after a short while.
- 3 Usage of application mostly depends on application's own structure. Follow the notes on the screen.

Playback and other options in the applications

Note:

- Some applications do not support all playing options, and playing options may vary among different applications.

- 1 »▶« starts playing in the applications;
- 1 »||« pauses playing in the applications;
- 3 »■« stops playing in the applications;
- 4 In the applications, press »◀◀« or »▶▶« to start picture search.
- 5 In the applications, press »|◀« or »▶|« to skip forward/backward.
- 6 »▼«, »▲«, »◀«, »▶« allows sliding of the navigation keys in the applications and virtual keyboard.
- 7 Press »OK« to confirm the selections in virtual keyboard and applications.
- 8 »1...0« »*« (red), »*« (green), »*« (yellow), »*« (blue) selects/activates various functions in applications.
- 9 »@« switches off the application and goes back to »My apps« menu.
- 10 »EXIT« switches off the application and goes back to the last broadcast source you were in.

WEB BROWSER

Web browser menu



- 1 Menu controls.
- 2 Active tab.
- 3 Previous page.
- 4 Next page.
- 5 Refresh.
- 6 New tab.
- 7 Address bar.
- 8 Search in site.
- 9 Favorites.
- 10 Home page.
- 11 Settings.
- 12 History.
- 13 Search in Web.
- 14 Zoom.
- 15 Close Web browser.
- 16 Close tab.

Web browser

Web browser allows you to navigate in the Internet.

- 1 Open the menu with »MENU«.
- 2 Select the menu item »Web Browser« with »>« or »<« and press »OK« to confirm.
 - Web Browser is displayed.
- 3 Select URL entry area with »^« or »v« and press »OK« to confirm.
 - Virtual keyboard will be displayed.
- 4 Enter the address and confirm with »♦♦♦♦« (blue).

Notes:

- Other functions are explained on the screen.
- You may connect a keyboard or mouse to both sockets »USB« or socket »USB3.0« socket to use in the Web browser. Keyboards requiring special driver are not supported.

MULTIMEDIA SERVER MODE

Playing the video, music and image files with home network connection

With DLNA menu of your television, you can easily access Video, music and photo files on server; and thanks to DMR feature, you can automatically start and stop media playing on devices with DMC feature.

Notes:

- You can share your video, music and image files through devices such as PC, mobile phone or NAS (Network Attached Storage) that function as DMS (Digital Media Server) compatible with DLNA.
- If the DMS device and the TV are connected to the wireless network at the same time, there may be lags and freezings during video playback.
- TV can also operate with DMS software that can be installed on a computer but, it is not guaranteed that it will run in full compatibility with software without a DMS certificate.
- Perform the following steps for a sample DMS setup.
Open Windows Media Player 11 on a PC with Windows operating system installed. In »Library« tab, select »Media Sharing«, tick on the »Share my media« box on the window that appears and then select »OK«. The new window displays the IP numbers of connected devices. To enable the TV to detect the computer, you need to select the television's IP number. If IP is not listed in the window; from »Media Sharing« menu's »Settings« option, you can select the option »Allow new devices and computers automatically« in the pop-up menu. After completing these processes, the television can only view the supported file formats in the Library.
In order not to encounter any problems with media sharing, check the Firewall settings of your modem and computer.

Selecting the digital media server

- 1 Open the menu with »MENU«.
- 2 Select the menu item »DLNA« with »▶« or »◀« and press »OK« to confirm.
 - »Media Player« menu is displayed.

Note:

- If no DMS device appears, check the network connection. See page 19 or 20.
- 3 Select any DMS device with »◀« or »▶« and press »OK« to confirm.
 - DMS device content is displayed.

Notes:

- File and folder structure of the DMS device in menu may vary depending on the Digital Media Server software in use.
- Subtitles are not supported on video files that are played through the DMS device.
- Video files played through DMS device support following formats that have obtained DLNA certificate: »MPEG_PS_NTSC«, »MPEG_PS_PAL«, »MPEG_TS_SD_EU« and »MPEG_TS_EU_ISO«.
- In videos with high bit rate, lag problem might be seen.
- Folders that appear as unknown in DLNA application cannot be played by the TV. Installing the codec to your computer can solve this problem.
- Audio files played through DMS device support following formats that have obtained DLNA certificate: »AAC_ADTS_320«, »LPCM«, »MP3«, »WMABASE« and »WMAFULL«.
- Image files played through DMS device support following formats that have obtained DLNA certificate: »JPEG_LRG«, »JPEG_MED« and »JPEG_SM«.

Playback

- 1 Select the content folder on DMS device with »▼«, »▲«, »◀« or »▶« and press »OK«.
 - All titles are displayed. To confirm.
- 2 Select the desired title with »▼«, »▲«, »◀« or »▶«.
- 3 Press »▶« to start playback.
- 4 Press »⏸« to pause playback.
To resume playback press »▶«.
- 5 Press »◀« or »▶« until you reach the desired file.
- 6 Press »■« to stop playback.
- 7 Switch back to the content with »BACK ◀«.
- 8 To exit DLNA feature press »EXIT«.

Information on recording and playing television programmes

- Recording and reproducing programmes, this can only be done with digital television stations (DVB-S, DVB-T and DVB-C).
- The digital television stations (DVB-S, DVB-T and DVB-C) you are able to record and playback also depend on the broadcasting station.
- Recording and reproducing programmes, as well as the Time Shift function can only be carried out using an external data medium (hard drive or USB stick).
- Recordings can be made with most data mediums on the market. However, we cannot guarantee operation for all data media.
- If you record a programme on an external data medium, you can only watch it on your television.
 - You cannot watch this programme on any other device.
- If you send your television to be repaired and hardware components need to be replaced, you might not be able to play the recordings again on the repaired television.
- Grundig isn't responsible for any loss of data stored on any external storage device.
- It is recommended to play the files saved on DTV by PRnP player. Some recorded files may not play correctly on USB Media Player.

Possible limitations when using an external data medium

Depending on the broadcasting station, you may experience various restrictions on some functions from some television stations.

GRUNDIG has no influence on these restrictions.

- Recording a programme on the external data medium can be disabled by the broadcaster.
 - If »URI* protected! PVR function blocked« is displayed, then recording or time shift is restricted (one recording possible) or disabled (recording not possible) by the broadcaster.
 - *URI = user rights information.
- If you record and save a programme on the archive of an external data medium, playback can be restricted. The broadcaster can allow you to see this programme one or more times but could also just make it available for a certain period of time.
- Stations from which children are protected, immediately require a PIN number before recording starts. If this authorisation is not given, the recording may not start.
- Copying a programme from a digital television station onto a video or DVD recorder using the »AV1/S-VHS« socket (analog audio/video signal) can also be restricted by the broadcaster. In order to do this, your device must support the copying function.

"Pausing" time shift programmes

You can pause any program you are watching. This is a useful function. For instance, if the phone rings when you are watching a movie, you can pause the movie and resume it after the call without missing nothing.

The last scene that was frozen is displayed and time shift is recorded into the external data media.

In Time Shift mode, you can only record as much as the free memory space on the external data media.

You can record current broadcast for approximately 60 minutes.

Note:

- For undisturbed "Permanent Timeshift" use an external USB hard disk.
- 1 Press »« during the broadcast.
 - Television picture is paused and delay time is displayed.
 - 2 To resume the broadcast, press »«.
 - The system continues recording the broadcast while you are watching it.

Note:

- Following functions can be used in time shift mode.
 - Fast rewind, press »« several times for the desired speed;
 - Fast forward, press »« several times for the desired speed;
 - To pause press »«.
- 3 Press »« to exit the Time Shift function.
 - The message »Live Broadcast« appears.
 - The scenes in the "time shift memory" are deleted.

USB RECORDING

Recording programmes

You can record the programmes. Programmes are recorded onto the external data media and the archive is managed via television.

A memory of 44 MB up to 110 MB is required for a 1 minute record.

Other recordings in the archive can be watched while a programme is being recorded.

It is possible to shift channels during recording between unscrambled channels on the same frequency (DVB-T) or on the same transponder (DVB-S).

When switched to channels other than (Terrestrial, Cable, Satellite and USB) during recording, the recording process is stopped.

One-touch programme recording

- 1 Select the channel with »1...0« or »P+«, »P-« and press »■« to start the recording.
 - Recording information is displayed: Recording symbol, channel name, programme time and recording time.
 - This information will disappear shortly.
- 2 To end the recording, press »■«.
- 3 Press »***« (green) to accept;
or
to resume recording press »*« (red).

Notes:

- When recording is complete, it will automatically be stored on the external data media.
- If you remove the external data media during recording, then the recording is cancelled automatically and no data is recorded onto the external data media.

Programme setting for recording

... with electronic programme guide

Electronic programme guide data can be used for recording.

25 EPG reminder and/or recorder can be set in total.

- 1 Press »GUIDE« to open the electronic programme guide.
- 2 Select the preferred TV program with »▼« or »▲«.
 - Information about the actual TV program is displayed.
- 3 Press »◀« or »▶« to select the TV program you want to record.
- 4 To add broadcasts to the timer press »OK«.
 - Information for the TV program to be recorded will be displayed.
- 5 Select the line »Record« with »▶« and press »OK« to confirm.
 - Recording data range appears.
- 6 Press »OK« to confirm.
- 7 Press »EXIT« to end the menu.

Note:

- If the data for the recording is to be changed, open menu with »MENU«. Select the menu item »Schedule List« with »▶« and confirm with »OK«. Press »***« (green), change the data and save it with »***« (blue).

Notes:

- A warning is displayed before the timer recording starts and counts down for 10 seconds to allow you to switch to the channel. At the end of 10 seconds, the channel to be recorded appears automatically.
- If the timer recording starts during playback, playback stops. If you do not select »Yes« in the warning prompt, recording will start automatically at the end of the countdown.
- Only for UPC customers Note: Parts of previous or next files can be included into the record while the programme is being recorded resulting from possible Programme Guide errors. In such cases, keep in mind that the highest family protection level will apply for the whole recording if one or more of those programmes have any level of family protection.

Set the lead/follow-up time

With this function you can change the recording time set by the electronic TV guide.

If you think that a program will start a few minutes earlier or will end several minutes later, you can „add“ up to 60 minutes to this time

- 1 Open the menu with »MENU«.
- 2 Select the menu item »Schedule List« with »▶« or »◀« and press »OK« to confirm.
- 3 Activate the »Padding Time« menu with »***« (blue).
- 4 Change the start time with »◀« or »▶«.
- 5 Use »▼« to switch to the line »End« and change the end time with »◀« or »▶«.
- 6 Save the setting with »***« (green).
- 7 Press »EXIT« to end the menu.

USB RECORDING

Editing the timer

You can edit programmed timers.

- 1 Open the menu with **»MENU«**.
- 2 Select the menu item **»Schedule List«** with **»>«** or **»<«** and press **»OK«** to confirm.
– **»Schedule List«** menu will be displayed.
- 3 Select the title of the programme to be changed with **»V«** or **»^«** and press **»*«** (green) to edit the title.
- 4 With **»V«** or **»^«** select the items you want to edit and modify them with **»1...0«** and **»<«** or **»>«**.
- 5 To save the modification, press **»***«** (blue).
– Timer is changed.
- 6 Press **»EXIT«** to end the setting.

Deleting a timer

You can delete programmed timers.

- 1 Open the menu with **»MENU«**.
- 2 Select the menu item **»Schedule List«** with **»>«** or **»<«** and press **»OK«** to confirm.
– **»Schedule List«** menu will be displayed.
- 3 Select the title of the programme to be deleted with **»V«** or **»^«** and delete the timer with **»***«** (yellow).
– Timer is deleted.
- 4 To confirm deletion process, press **»*«** (green);
or
to cancel deletion process, press **»*«** (red).
- 5 Press **»EXIT«** to end the setting.

Playback

Either started manually or with the timer function, the recorded programmes are all stored in the external data media. You can display an archive on an external data media from **»Media Player«** menu.

Selecting a broadcast from the recorded files list

- 1 Open the menu with **»MENU«**.
- 2 Select the menu item **»PRnP«** with **»>«** or **»<«** and press **»OK«** to confirm.
– **»Media Player«** menu is displayed.
- 3 Select the option **»PVR«** with **»>«** or **»<«** and press **»OK«** to confirm.
– Recorded files are displayed.
- 4 Select the broadcast you want to play with **»V«**, **»^«**, **»<«** or **»>«** and start playback with **»▶«**.
- 5 Press **»■«** to end playback.
– TV returns to media player menu.

Forward/reverse picture search

- 1 Press **»▶«** repeatedly to select the playback speed (2x, 4x, 8x, 16x or 32x);
or
press **»◀«** repeatedly to select the playback speed (2x, 4x, 8x, 16x or 32x).

Deleting programmes from the recorded files menu

You can delete recorded programmes from the Recorded Files list.

- 1 Open the menu with **»MENU«**.
- 2 Select the menu item **»PRnP«** with **»>«** or **»<«** and press **»OK«** to confirm.
– **»Media Player«** menu is displayed.
- 3 Select the option **»PVR«** with **»>«** or **»<«** and press **»OK«** to confirm.
– Recorded files are displayed.
- 4 Select the broadcasts to be deleted with **»<«** or **»>«**.
- 5 To delete the broadcast, press **»*«** (red).
- 6 Press **»***«** (green) to confirm deletion process.

Note:

- Files that are being recorded or played back can not be deleted from the **»Recorded Files«** menu.
- 7 Press **»EXIT«** to end the menu.

USB OPERATION

File formats

Your television can be operated via the USB input with the following file formats:

Video data

Video compression / decompression (codec) is intended for decreasing the storage area without sacrificing the picture quality.

Your HD Digital Receiver allows you to play compressed video data with DIVX, XVID, H.264/MPEG-4 AVC(L4.1, Ref. Frames:4), MPEG-4, MPEG-2, MPEG-1, MJPEG, MOV standards.

File extensions that the device supports: ".avi", ".mkv", ".mp4", ".ts", ".mov", ".mpeg", ".dat", ".vob". In addition to video data, these files also contain audio data compressed and "packaged" by using MP3, AAC, DTS 2.0 or Dolby Digital.

DTS 2.0+Digital Out denotes the dual ability to pass the DTS encoded digital bistream to an external DTS decoder for playback as well as fold down the digital surround soundtrack for playback in a 2-channel environment through analog outputs.

Audio data

Your television can play audio data coded with MP3, AAC standards.

MP3 stands for MPEG-1 Volume Level 3 and is based on the MPEG-1 standard developed by MPEG (Motion Picture Expert Group).

AAC indicates the Advanced Audio Coding and is developed by MPEG. AAC provides higher audio quality with the same data rate (bit rate).

WMA (Windows Media Audio) is a compression standard developed by Microsoft for audio data.

These formats enable audio files to be saved on storage devices with a sound quality similar to that of a CD.

File extensions supported by your device: ".mp3", ".mp2", ".wma", ".m4a", ".aac", ".wav"

MP3 files can be organised into folders and subfolders similar to the files on a computer.

Image data

Your television can display picture data in JPEG, PNG and BMP formats.

JPEG stands for Joint Picture Experts Group. This process is intended to compress picture files.

PNG and BMP standards are intended to compress picture data without loss.

Picture files can be saved in a data storage medium together with other file types.

 
Such files can be organized as folders and subfolders.

The file browser

The file browser displays the video, audio and picture data that the external data medium provides.

If a data medium contains different file formats, you can deactivate data (Video file, Audio file, Picture file) you do not need for the playback using a filter function.

The main menu of the file browser

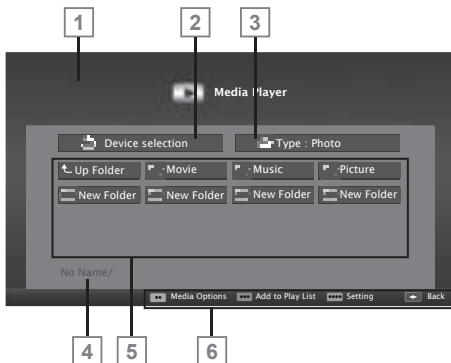

- 1 Preview.
- 2 Data medium selection.
- 3 Data type.
- 4 Name of the data medium.
- 5 Folders on the data medium.
- 6 Menu navigation.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks and DTS Studio Sound is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

Playback basic functions

- 1 Open the menu with »MENU«.
- 2 Select the menu item »Media Player« with »>« or »<« and press »OK« to confirm.
 - »Media Player« menu is displayed.
- 3 Select the external data medium with »<« or »>« and press »OK« to confirm.
 - Media Player menu of the selected external data medium is displayed.

Note:

- If the content of the external data medium is not displayed, press »♦♦♦« (yellow) to refresh.
- 4 Select the push button »Type« with »^« and »>« and press »OK« to confirm.
 - 5 Select the desired type (Movie, Music or Photo) with »<« or »>« and press »OK« to confirm.
 - 6 Select the folder with »v« or »^« and press »OK« to open it.
 - A list of sub-directories appears.

Note:

- Go back to the previous folder with »BACK ◀«.
- 7 Select the track or picture with »v«, »^«, »<« or »>« and press »▶« to start playing.

Notes:

- When playing picture data, press »?« to view information about the resolution and the size.
 - For playing MP3 or WMA data, information on the album, track and singer is displayed at the left of the menu.
 - When playing picture data, press »?« to switch on a control panel.
- 8 Press »||« to pause playback.
 - 9 To resume playback press »▶«.
 - 10 Press »■« to end playback.
 - The file browser appears.

Notes:

- Use »^« to select »Up Folder«, when you would like to return to the last folder.
- It is possible that some files that are supported in USB mode do not operate due to some problems that may arise depending on how such files are created (compression) although they contain the supported file extension.
- If there are more than one audio sources (audio stream) in the video files that are being played, then you can switch between the audio sources with the »🔊« while the file is played in full screen mode.
- Movies you will be watching from the movie file only supports subtitles with .srt, .sub, .ass, .ssa, .smi format. Names of the subtitle and movie files must be the same. Otherwise, subtitle can not be displayed.

WIRELESS SCREEN SHARE (LIVESHARE) _____



What is LIVESHARE?

Liveshare is a wireless technology featured with Android operating system and used to reflect the screen of your mobile device which supports this feature to your television supporting Liveshare. By using this technology you can share your device's content, present a slide show or play your favorite game on a larger screen.

Screen share with Liveshare connection

- 1 Open the menu with »**MENU**«.
- 2 Select the menu item »Screen Share« with »**>**« or »**<**« and press »**OK**« to confirm.
 - »Liveshare« menu is displayed.
- 3 Start Liveshare application from your laptop PC or mobile device and select your television.
 - Liveshare will begin in a short while and the screen image of your laptop PC or mobile device will be reflected on the television.
- 4 Press »**EXIT**« to end Liveshare.

Note:

- To find out if your laptop PC or mobile device supports Liveshare feature or not, please visit the Website of the manufacturer.

GRUNDIG 65 VLE 6530 BL

Product Fiche

Energy efficiency class

A

Screen size:

164 cm/65"

Power consumption:

in operation mode 151 W / 175 W max.

Annual power consumption:

220 kWh

Stand-by power consumption:

< 0.50 W

Max. resolution:

1920 x 1080

Other data

Operating voltage:

220-240 V~ 50-60 Hz

Screen Area (dm²):

115 dm²

Rosh Limits: Pb (Lead) / Hg (Mercury)

Pb (Lead) complies with ROHS directive / 0 mg

Peak Luminance rate:

65 %

Audio out:

2 x 30 watt music 2 x 15 sinusoidal wave + 10 W sinusoidal wave (Subwoofer)

Subwoofer feature is optional. Not available in all models.

Default satellite:

20

LNB Power:

13/18V, 14/19V optional, max.500mA

LNB switching signal:

0/22 kHz 650mV +/- 250mVpp

DiSEqC:

1.0 control, 1.1 control, 1.2 control

Reception range:

Satellite:

Ku band 10700MHz - 12750MHz

Modulation: DVBS QPSK, DVBS2 QPSK,

8 PSK IF band 950 MHz - 2150 MHz

Signal level: -25dBm to -65 dBm

Cable:

Full band 110MHz 862MHz

Modulation: 16QAM, 32QAM,

64QAM, 128QAM and 256QAM

Symbol rate: 4.0Msym/s to 7.2Msym/s

Digital (DVB-T):

VHF/UHF Band width 7 MHz

and 8 MHz

FFT size: 2k, 8k

Modulation: 16QAM, 64QAM, QPSK

Security range: 1/4, 1/8, 1/16, 1/32

Digital (DVB-T2):

VHF/UHF Band width 7 MHz

and 8 MHz

FFT size: 1k, 2k, 4k, 8k, 16k, 32k

Modulation: 16QAM, 64QAM,

256QAM, QPSK

Security range: 1/4, 19/256, 1/8, 19/128, 1/16, 1/32, 1/128

This feature is optional. Not available in all models.

Analog:

C02 ... C80, special channels S01 ... S41

Default channels:

TV/Radio 6000 (Satellite - DVBS),

1000 (Cable - DVBC) / 99 (analog)

1000 (Antenna - DVBT) / 99 (analog)

8 AV, 3 USB

Weight:

approx 25,5 kg

Size:

W H D 145,8 x 84,8 x 7 cm

Grundig Intermedia GmbH Beuthener Strasse 41 90471 Nürnberg

AUS GUTEM GRUND
GRUNDIG

www.grundig.com



MSV801-01