Product fiche according to Commission Delegated Regulation (EU) 811/2013														
Brand					GRUNDIG									
Model Name					GHP-MM08		GHP-MM10		GHP-MM12		GHP-MM14		GHP-MM16	
Temperature application		°C			55	35	55	35	55	35	55	35	55	35
Seasonal space heating energy efficiency class				A++	A+++	A++	A+++	A++	A+++	A++	A+++	A++	A+++	
Rated heat output		P _{rated}		kW	7	8	7	9	11	11	13	13	14	15
Seasonal space heating energy efficiency		η _s		%	130	180	132	180	132	180	132	175	132	175
Annual energy consumption		on Q <i>HE</i>		kWh	4069	3489	4695	4132	6761	5280	7826	6198	8765	7043
Sound power level	nd power Indoor Unit		wa dE		-	•	-		-		-		-	
Specific precautions in assembled, installed or maintained				Refer to the installation and operating manuals.										
Rated heat output		Colder climate	Prated	kW	-	-	-	-	_	-	-	-	-	-
		Warmer climate	P _{rated}	kW	-	-	-	-	-	-	-	-	-	-
Seasonal space heating energy efficiency		Colder climate	ης	%	-	-	-	-	-	-	-	-	-	-
		Warmer climate	ης	%	-	-	-	-	-	-	-	-	-	-
Annual energy consumption ⊢		Colder climate	QHE	kWh	-	-	-	-	-	-	-	-	-	-
		Warmer climate	QHE	kWh	-	-	-	-	-	-	-	-	-	-
Sound power level		Outdoor Unit	Lwa	dB	59		60		64		65		68	

Acoustic Noise Information:

The maximum sound pressure level is less than 70 dB for outdoor unit which Rated heat output >6 kW and ≤ 12 kW;

The maximum sound pressure level is less than 78 dB for outdoor unit which Rated heat output >12 kW and \leq 30 kW:

According to EN 12102-1:2017.

Power-on is mandatory for the unit in winter to ensure the anti-freezing function in standby mode; Normal pressure in the water loop should be kept in summer;

Water should be filled up to the loop immediately after cleaning.

If the power is cut off for more than one hour in winter when the temperature is lower than 0°C the water in the unit should be drained out to prevent the unit from freezing (the application of anti-freeze as media should be an exception).

In addition, in the case of long-time-no-application, early notice to after sales engineers and professional maintenance is needed in order to keep the unit in good condition during operation. Do not use this unit for any purposes other than the Heating and Cooling.