

GRUNDIG

Washing Machine

User Manual



GW9I91041A

2820531625/ EN/ / 14/06/2024 15:31



Please read this user manual first!

Dear Customer,

Thank you for choosing Grundig product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product.

Follow all warnings and information in the user manual. Thus, you protect yourself and your product against possible dangers.

Keep the user manual. If you hand over the product to someone else, provide the user manual as well. Warranty terms, usage and troubleshooting methods of your product are in user guide.

Symbols and Definitions

The following symbols are used in the user guide:






	Danger that could result in death or injury.
	Important information or useful hints about usage.
	Read the user manual.
	Recyclable materials.
	Hot surface warning.
WARNING	Danger that may result in property damage to the product or its environment.

Table of Contents

1 Safety Instructions	4	6.1 Control Panel and Screen Symbols	24
1.1 Intended Use.....	4	6.2 Programme and Consumption Table	24
1.2 Safety of Children, Vulnerable Persons and Pets	4	6.3 Programme Selection.....	26
1.3 Electrical Safety	5	6.4 Additional Properties	27
1.4 Handling Safety	6	6.5 Main Programs	27
1.5 Installation Safety.....	6	6.6 Downloaded Programs.....	28
1.6 Operational Safety.....	8	6.7 Temperature Selection	30
1.7 Maintenance and Cleaning Safety	9	6.8 Spin Speed Selection.....	30
2 Important Instructions for Environment	10	6.9 Auxiliary Function Selection.....	31
2.1 Package Information.....	10	6.9.1 Auxiliary Functions	32
3 Technical Specifications	11	6.9.2 Functions/Programmes Selected by Pressing the Function Keys for 3 Seconds	33
4 Installation	13	6.10 End Time	34
4.1 Appropriate Installation Location.	13	6.11 Starting the Programme	35
4.2 Assembly of Bottom Panel Covers.....	14	6.12 Loading Door Lock.....	35
4.3 Removing Transportation Safety Bolts	14	6.13 Changing the Selections After Programme has Started	36
4.4 Connecting to Water Supply	15	6.14 Cancelling the Programme	36
4.5 Connecting the Drain Hose to the Drain	15	6.15 End of Programme.....	36
4.6 Adjusting the Stands	16	6.16 Screen Brightness Adjustment	37
4.7 Electrical Connection	16	6.17 HomeWhiz Feature and Remote Control Function	37
4.8 Start Up	16	6.17.1 HomeWhiz Setup.....	37
5 Preliminary Preparation	17	6.17.2 Setting up a Washing Machine Connected to Someone Else's Account.....	38
5.1 Sorting the Laundry	17	6.17.3 Deleting the HomeWhiz Account Match.....	39
5.2 Preparing Laundry for Washing....	17	6.17.4 Remote Control Function and Its Use	39
5.3 Tips for Energy and Water Saving	17	6.17.5 Troubleshooting	40
5.4 Loading the Laundry.....	17	6.18 Drum Illumination	40
5.5 Correct Load Capacity	18	7 Maintenance and Cleaning	40
5.6 Using Detergent and Softener	18	7.1 Cleaning the Detergent Drawer	40
5.6.1 Automatic Dosing	19	7.2 Cleaning the Loading Door and the Drum.....	42
5.6.2 Dosage Selections, Cancellation or Use of Powder Detergent.....	20	7.3 Cleaning the Body and Control Panel.....	42
5.6.3 Detergent and/or Softener Running Out	22	7.4 Cleaning the Water Intake Filters..	42
5.6.4 Filling Detergent or Softener into the Wrong Compartment ...	22	7.5 Draining Remaining Water and Cleaning the Pump Filter	42
5.7 Tips for Efficient Washing	22	8 Troubleshooting	43
5.8 Displayed Programme Duration ...	23	9 DISCLAIMER / WARNING	48
6 Operating the Product	23		



1 Safety Instructions

This section includes the safety instructions necessary to prevent the risk of personal injury or material damage.

Our company shall not be held responsible for damages that may occur if these instructions are not observed.

- Installation and repair operations shall always be performed by Authorised Service.
- Use original spare parts and accessories only.
- Do not repair or replace any component of the product unless it is clearly specified in the user manual.
- Do not modify the product.



1.1 Intended Use

- The product's bench life is 10 years. During this period, original spare parts will be available to operate the appliance properly.
- This product has been designed for domestic use. It is not for commercial purposes or it should not be used out of its intended use.
- The product must only be used for washing and rinsing of laundry that are marked accordingly

- This appliance is intended to be used in household and similar applications. For example;
 - Personnel kitchens of stores, offices and other work environments;
 - Ranches,
 - By customers of hotels, motels and other accommodation facilities,
 - Bed and breakfasts, hostel-like environments,
 - Common areas of apartment blocks or laundries.



1.2 Safety of Children, Vulnerable Persons and Pets

- This product may be used by children aged 8 years and older and persons with underdeveloped physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a the product safe way and the hazards involved.
- Children under the age of 3 should be kept away unless continuously supervised.
- Electrical products are dangerous for children and pets. Children or pets should not play

with, climb on top or inside the product. Check inside the product before use.

- Use child lock to prevent children from intervening with the product.
- Do not forget to close the loading door when leaving the room where the product is located. Children and pets may get locked inside and drown.
- Children should not perform cleaning and user maintenance works without an adult's supervision.
- Keep the packaging materials away from children. Risk of injury and suffocation.
- Keep all detergents and additives used for the product away from children's reach.
- Cut the power cable and break and deactivate the locking mechanism of the loading door before disposing of the product for children's safety.

1.3 Electrical Safety

- Product should be unplugged during installation, maintenance, cleaning and repair procedures. Unplug the product or turn off the fuse.
- Damaged power cables should be replaced by the authorised service in order to prevent possible danger.

- Do not tuck the power cord under the product or to the rear of the product. Do not put heavy items on the power cord. Do not over bend, crush and touch the power cable to sources of heat.
- Only use the original cable. Do not use cut or damaged cables.
- Do not use an extension cord, multi-plug or adaptor to operate your product.
- Extension cords, multi-socket outlets, adapters or portable power supplies can overheat and cause a fire. Make sure not to place power sockets and portable power supplies near or behind the product.
- The plug shall be easily accessible. If this is not possible, a mechanism that meets the electrical legislation and that disconnects all terminals from the mains (fuse, switch, main switch, etc.) shall be available on the electrical installation.
- Do not touch the plug with wet hands.
- When unplugging the appliance, don't hold the power cord, but the plug.
- Make sure the plug is not wet, dirty or dusty.

- Never connect your product to electricity saving devices. Such systems are harmful to the product.

1.4 Handling Safety

- Unplug the product before moving, remove the water outlet and water main connections. Drain any water left inside the product.
 - This product is heavy, do not handle it by yourself. It may cause injuries if your product falls on you. Do not hit and drop the product while carrying.
 - Do not hold parts such as the laundry loading door to lift and move the product. The upper tray should be tightly fixed for moving.
 - Carry the product in an upright position. If it cannot be carried upright, tilt it to the right side in frontal view.
 - Make sure that the hoses as well as the power cable are not folded, pinched or crushed after the product is fitted into its place after installation or cleaning procedures.
- product for installation and make sure the electrical mains, clean water mains and water outlet are suitable. If not, call a qualified electrician and plumber to have them make the necessary arrangements. These operations are the responsibility of the customer.
 - Prior to commencing the installation, be sure to switch off the fuse to deactivate the power supply for the line to which the product will be connected.
 - This product is intended for use at altitudes not exceeding 2000 meters above sea level.
 - Check for any damage on the product before installing it. Do not have the product installed if it is damaged.
 - Always wear personal protective equipment (gloves, etc.) during product installation, maintenance and repair. There is a risk of injury.
 - Injuries may occur if hands are put into uncovered slots. Close the holes of the transportation safety bolts with plastic plugs.
 - Do not install or leave the product at locations where it may be exposed to external environment conditions.

1.5 Installation Safety

- Check the information on the manual and installation instructions to prepare the

- Do not install the product at locations where the temperature drops below 0 °C.
- Do not place the product on a carpet or similar surface. It would create fire hazard since it cannot receive air from underneath.
- Place the product on a level and hard surface and balance with the adjustable legs.
- Connect the product to a grounding plug protected by a fuse suitable to the current values on the type label. Make sure the grounding is carried out by an expert electrician. Do not use the product without suitable grounding to local/national regulations.
- Plug the product in a socket with voltage and frequency values suitable to those indicated on the type label.
- Do not plug the product to loose, broken, dirty, greasy sockets or sockets that has come out their seats or sockets with a risk of water contact.
- Use the new hose set provided with the product. Do not re-use old hose sets. Do not make additions to the hoses.
- Connect the water inlet hose directly to the water tap. The pressure from the tap should be minimum 0.1 MPa (1 bar) and maximum 1MPa (10 bars). 10 to 80 litres of water should be running from the tap in a minute in order for the product to function properly. If the water pressure is above 1 MPa (10 Bars), a pressure-reducing valve should be fitted. The maximum allowed temperature is 25°C.
- Fit the end of the water discharge hose to the dirty water discharge drain, the sink or the bathtub.
- Place the power cable and hoses in locations without risk of tripping.
- Do not install the product behind a door, a sliding door or at another location that will prevent the door from opening completely.
- If a drier is to be placed on the product, fix with a suitable connection apparatus obtained from the authorised service.
- There is a risk of contact with electrical pieces when the upper trays is removed. Do not dismantle the upper tray of the product.
- Place the product at least 1 cm away from the edges of furniture.

1.6 Operational Safety

- When you are using the appliances, use only detergents, softeners and supplements suitable for washing machines.
- Do not use chemical solvents on the product. These materials contain an explosion risk.
- Do not operate defective or damaged products. Unplug the product (or turn off the fuse it is connected to), turn off the water tap and call an authorised service.
- Do not place sources of ignition (burning candle, cigarettes, etc.) or sources of heat (irons, furnaces, ovens, etc.) on top of or near the product. Do not put inflammable/explosive materials near the product.
- Do not get on the product.
- Unplug the product and turn off the tap if you will not be using the product for long periods.
- Detergent/maintenance materials may splash out of the detergent drawer if it is opened while the machine is working. Contact of the detergent with your skin and eyes is dangerous.
- Make sure pets do not climb inside the product. Check inside the product before use.
- Do not force open the locked loading door. The door will open once the washing is completed. If the door does not open, use the solutions for “loading door does not open” error in the Troubleshooting section.
- Do not wash elements contaminated with gasoline, kerosene, benzene, reducers, alcohol or other inflammable or explosive materials and industrial chemicals.
- Do not directly use dry cleaning detergent and do not wash, rinse or spin laundry contaminated with dry cleaning detergent.
- Do not place your hands into the rotating drum. Wait until the drum no longer rotates.
- If washing laundry at high temperatures, the discharged washing water would burn your skin if in contact with your skin, for ex. when the draining hose is connected to the tap. Do not touch the discharge water.
- Take the following precautions to prevent formation of biofilm and malodours:

- Make sure the room where the washing machine is placed is well ventilated.
- Wipe the door gasket and loading door glass with a dry and clean cloth at the end of the programme.
- The glass of the loading door will heat up when washing at high temperatures. Therefore, do not touch the loading door glass while washing, especially children.
- Before disposing of worn out and no longer usable items:
 1. Unplug the power plug and remove it from the socket.
 2. Cut the power cable and disconnect it with the plug from the appliance.
 3. Break the locking mechanism of the loading door to render it inoperable.
 4. Do not allow children to play with the outdated product.
- Do not put hands, feet and metal objects under or behind your product. This can cause jams, and any sharp edge can cause personal injury.
- Use a clean, dry cloth to wipe foreign material or dust from the plug ends. When cleaning the plug, do not use a wet or damp cloth. Otherwise, there is a risk of fire or electric shock.
- Do not wash the product with pressure washers, by spraying vapour, water or pouring water. There is a risk of electrocution.
- Do not use sharp or abrasive tools to clean the product. Do not use household cleaners, soap, detergent, gas, gasoline, thinner, alcohol, varnish, etc. while cleaning.
- Cleaning agents containing solvents might reek poisonous fumes(for ex. cleaning solvent. Do not use cleaning products containing solvents.
- There may be detergent residues in the detergent drawer when you open it for cleaning.
- Do not dismantle the filter of the discharge pump while the product is running.
- The temperature in the machine may rise up to 90°C. Clean the filter after the water



1.7 Maintenance and Cleaning Safety

- Before cleaning or servicing the washing machine, unplug it or cut the power at the fuse.
- If you need to move the product for cleaning, do not pull on the cover. The cover can break and cause injury!

in the machine cools down in order to avoid risk of getting burnt.




2 Important Instructions for Environment


2.1 Package Information


Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

3 Technical Specifications

Supplier's name or commercial brand	Grundig
Model name	GW9I91041A
	7170581300
Nominal Capacity (kg)	10
Maximum spin speed (cycle/min)	1400
Built-In	No
Height (cm)	84,5
Width (cm)	60
Depth (cm)	59
Single Water inlet / Double Water inlet	+ / -
Electrical connection (V/Hz)	230 V / 50Hz
Total current (A)	10
Total power (W)	2200
Main model code	1621

	<p>The model information as stored in the product database can be reached by entering following website and searching for your model identifier (*) found on energy label.</p> <p>https://eprel.ec.europa.eu/</p>
<p>SUPPLIER'S NAME MODEL IDENTIFIER → (*)</p> <p> </p>	

 The consumption values apply when wireless network connection is turned off.

 The defined cybersecurity-related software update support period of the product is the warranty period of the product. After this period, cybersecurity-related software updates are not guaranteed.

Symbols Table

Prewash	Fast	Fast+	Extra Rinse	Extra Water	Anti Crease	Pet Hair Removal	Steam	Night Mode	Soaking	Rinse Hold	Steeping
AutoDose	Liquid Detergent Selection	Softener Selection	Rinse	Spin+Drain	Drain	Temperature	Spin	No Spin	Tap Water (Cold)	No Water	Time Delay
Door Lock	Child Lock	On/Off	Start / Pause	Soil Level	Add Garment	Downloaded Program	Wash	Ok (End)	Cancel	AntiCrease+	Drying
Extra Dry	Cupboard Dry	Iron Dry	Timed Drying	Clean& Wear	Intensive	Water Mode	SaveWater				

4 Installation



Please read the "Safety Instructions" section first!



Your washing machine automatically detects the amount of laundry placed inside when selecting a program.

While installing the product, before the first use, calibration should be done to ensure that the laundry amount is detected in the most accurate way.

To do this, select the Drum Cleaning* program and cancel the spin function. Start the program without laundry. Wait for the program to finish, which will take about 15 minutes.


*The program name may vary depending on the model. For the appropriate program selection, review the program descriptions section.

- Please contact the nearest Authorised Service for the installation of the appliance.
 - Make sure that the installation and electrical connections of the product are performed by authorised service agent. Manufacturer shall not be held responsible for damages caused by operations performed by unauthorised persons.
 - Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
 - Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.
 - Prior to installation, visually check if the product has any defects on it. Do not have the product installed if it is damaged. Damaged products cause risks for your safety.
- ### 4.1 Appropriate Installation Location
- Place the product on a hard and level floor. Do not place it onto a carpet with high pile or other similar surfaces. Placing on an improper floor shall cause noise and vibration problems.
 - Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the product on a solid and flat floor that has sufficient load carrying capacity.
 - Do not place the product on the power cable.
 - Do not install the product at places where temperature may fall below 0 °C. Freezing might damage your product.
 - Leave a minimum space of 1 cm between the product and the furniture.
 - If you will install the product on a surface with steps, never place it close to the edge.
 - Do not place the product on any platform.
 - Do not place heat sources such as cooker, irons, ovens, heater etc. on the appliance and do not use them on the product.



Your product is not suitable for use on under counter cabinets with doors.

If you want to use the product in the above-mentioned way, please remove the cabinet door and pull the product to the front as shown in the figure so that the control panel is accessible.

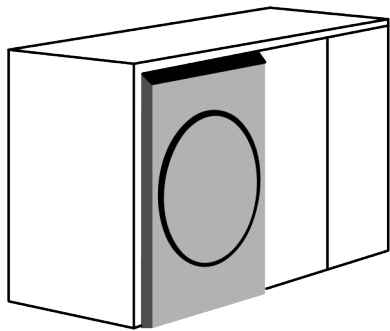


4.2 Assembly of Bottom Panel Covers



With some models, the base parts of the products are completely closed. These products do not have plugs and covers.

- In order to increase the sound comfort of the product, attach cover A after removing the package foam.


Cover A

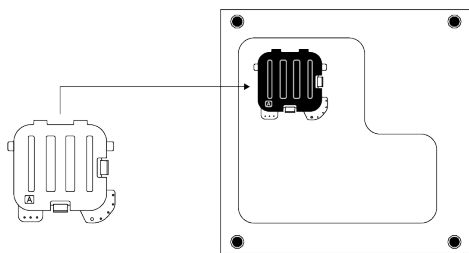

Tilt the machine back slightly. Rest the tabs of Cover A against the lower panel. Complete the assembly by rotating the cover.


- Cover B and the Cap are optional. If available, attach cover B and the Cap.

Cover B

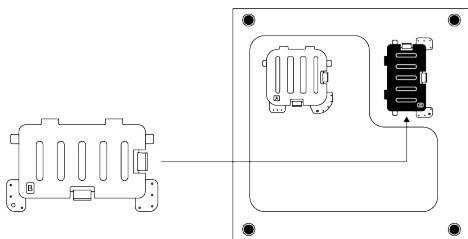

Rest the tabs of Cover B against the lower panel. Complete the assembly by rotating the cover.


Cap

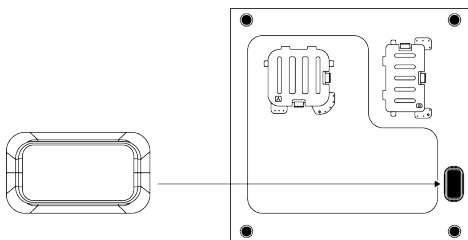

Insert the cap by pushing it with your finger.

4.3 Removing Transportation Safety Bolts

 1. Loosen all transportation safety bolts with an appropriate wrench until they turn freely.
2. Bend the inner part by pressing it at the grip areas and pull the part out.
3. Attach the plastic covers supplied in the User Manual bag into the holes on the rear panel.



NOTICE

Remove the transportation safety bolts before operating the product. Otherwise, the product will get damaged.



NOTICE

Keep the transportation safety bolts in a safe place to reuse when the product needs to be moved again in the future.

Install the transportation safety bolts in reverse order of the disassembly procedure.

Never move the product without the transportation safety bolts properly fixed in place.

4.4 Connecting to Water Supply





NOTICE

Models with a single water inlet shall not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate.

Do not use old or used water inlet hoses on a new product. It may cause water leakage from your machine and stain your laundry.

1. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.
2. Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leak occurs, turn off the tap and remove the nut. Check the gasket and tighten the nut carefully again. In order to prevent the water leaks and resultant damages, keep the taps closed when you do not use the product.

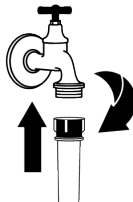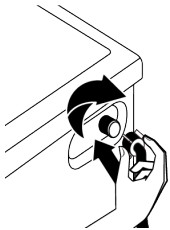


4.5 Connecting the Drain Hose to the Drain

1. Attach the end of the drain hose directly to waste water drain, washbasin or bathtub.



Your house will be flooded if the water draining hose is dislocated during water draining. There is also a risk of burning due to the high washing temperatures. In order to prevent such situations and make sure that the product performs water intake and drain processes without any problem, fix the drain hose securely.

2. Connect the drain hose to a minimum height of 40 cm and a maximum height of 100 cm.
3. Installing the water draining hose at ground level or close to the floor (40 cm below) and then raising it makes water discharge difficult and the laundry may come out extremely wet. Thus, follow the heights provided in the figure.

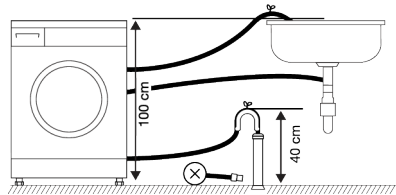

4. To prevent the waste water to go back into the product again and to ensure easy drainage, do not immerse the end of the hose into the waste water or do not insert it into the drain for more than 15 cm. If it is too long, cut it short.
5. The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the product. Otherwise, water discharge issues may emerge.
6. If the length of the hose is too short, use it by adding an original extension hose. The overall length of the hose shall not be longer than 3.2 m. To prevent water

leaks, always secure the connection between the extension hose and the draining hose of the product with a suitable clamp so that it does not come off and cause leaks.

4.6 Adjusting the Stands

 


WARNING

In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Ensure that the product is balanced by adjusting the feet. Otherwise, the product may move from its place and cause crushing, noise and vibration problems.

To avoid damaging the lock nuts, do not use any tools to loosen the nuts.

1. Loosen the lock nuts on the feet by hand.
2. Adjust the feet until the product stands level and balanced.
3. Tighten all lock nuts again by hand.



4.7 Electrical Connection

Connect the product to a grounded outlet protected by a 16 A fuse. Our company shall not be responsible for the damages that shall be incurred due to using the product without grounding according to local regulations.

- Connection must comply with national regulations.


- The electrical connection cable infrastructure of the product must be adequate and suitable for product requirements. It is recommended to use a residual current device.
- Power cable plug must be within easy reach after installation.
- If the current supply to the fuse or breaker in the house is less than 16 Amps, have a qualified electrician install a 16 amp supply.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs. Overheating and burning may occur due to the connecting cable.



Damaged power cables should be replaced by the authorised service in order to prevent possible danger.

4.8 Start Up

Before starting to use the product make sure that the preparations described in section "Environmental instructions" and "Installation". To prepare the product for washing laundry, perform first operation in Drum Cleaning programme. If this programme is not available in your product, apply the method which is described in section "Cleaning the loading door and the drum".

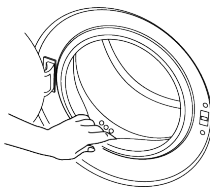

Some water has remained in the product due to the quality control processes in the production. It is not harmful for the product.

5 Preliminary Preparation



Please read the "Safety Instructions" section first!

5.1 Sorting the Laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.
- Always observe the instructions given on the garment care labels.

5.2 Preparing Laundry for Washing

- Laundry items with metal attachments such as, underwiring, belt buckles or metal buttons will damage the product. Remove the metal pieces or wash such clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items. Curtain attachment items may cause pulling and tearing on the curtain.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "Machine washable" or "Hand washable" labelled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing.
- Wash trousers and delicate laundry turned inside out.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the product. Such dusts and

powders on the laundry may build up on the inner parts of the product in time and can cause damage.

5.3 Tips for Energy and Water Saving

Following information will help you use the product in an ecological and energy/water-efficient manner.

- Operate the product in the highest load capacity allowed for the programme you have selected, but do not overload. See "Programme and consumption table"
- Observe the temperature instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use more detergent than the recommended amount on the detergent packaging.

5.4 Loading the Laundry

1. Open the loading door.
2. Put the laundry items into the product in a loose manner.
3. Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door. The loading door is locked while a programme is running. The door lock will open once the programme is completed. Then you can open the loading door. If the door does not open, apply the solutions provided for "Loading door cannot be opened" error in the Troubleshooting section.

5.5 Correct Load Capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the desired washing programme.

The product automatically adjusts the water amount according to the weight of the laundry put inside it.



Follow the instructions in "Programme and consumption table". When the appliance is overloaded product's washing performance will drop. Moreover, noise and vibration problems may occur.

5.6 Using Detergent and Softener




WARNING

Read the manufacturer instructions on the package while using detergents, softeners, starch, bleach and decolourants, anti-lime scale and follow the dosage information provided. Use a measuring cup, if any.

Washing products such as powder detergents and viscous, non-fluid liquid detergents cannot be used in the detergent compartments.

Detergent, Softener and Other Cleaning Agents

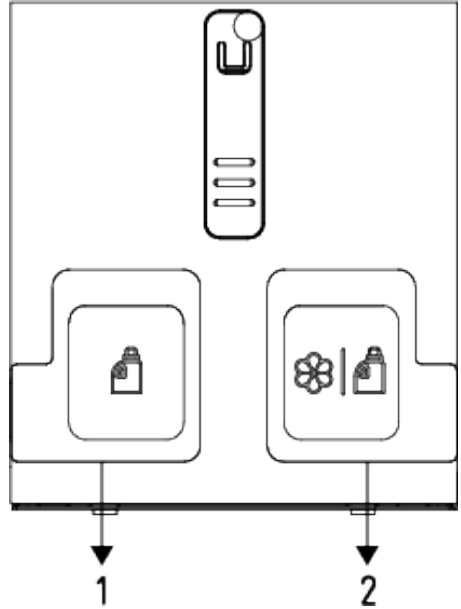

The detergent drawer comprises of two compartments:

- (1) Liquid detergent compartment
- (2) Softener or alternative liquid detergent compartment

- Before starting a washing program, add some liquid detergent, softener or alternative liquid detergent.
- Do not leave the detergent drawer open when the washing programme is on. Always close it.
- If you are to use the detergent pod or the dispensing ball, place it directly among the laundry in the product.



Your product has no prewash compartment.

You can select the prewash function using the HomeWhiz application.

The product runs the prewash cycle with liquid detergent.

Choosing the Detergent type

Detergent type to be used depends on the washing programme, fabric type and colour.

- For colors and white laundry, please use detergents that comply with recommendations of detergent manufacturers.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) intended solely for delicate clothes and at suggested programmes.
- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woollens at suggested programme with special detergent made specifically for woollens.
- Please review the programme descriptions part for suggested programme for different textiles.
- All recommendations about detergents are valid for selectable temperature range of programmes.




Only detergents, softeners and additives suitable for washing machines should be used. Do not use liquid detergents or other cleaning agents to soften the laundry. Do not use soap powder.

5.6.1 Automatic Dosing


Initial Installation

Turn on the machine with the On/Off key.

Dosage symbol () appears in programs where detergent dosing is allowed. If the liquid detergent or softener compartments are empty, the dosage symbol will flash in programs where detergent dosing is allowed.


Filling Liquid Detergent and Softener

1. Slightly push the marked area on the detergent drawer to open it.

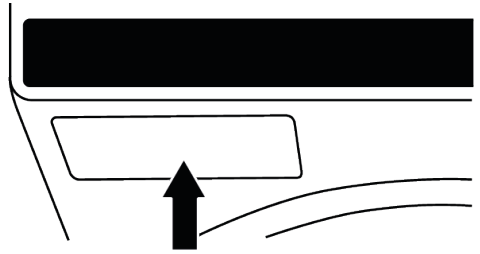



Make sure to close the detergent drawer before operating the product. Push the drawer fully to close it. If you do not push it fully, the spring force will open it back.

2. To fill liquid detergent (left) or softener / alternative liquid detergent (right), open the related tank's lid by pulling it upwards as shown in the picture.

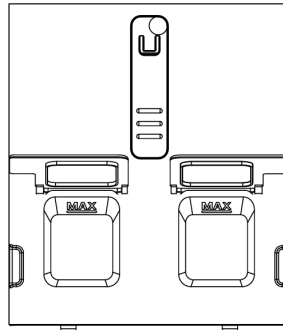

3. Remember not to exceed the "Max" sign when adding liquid detergent or softener.

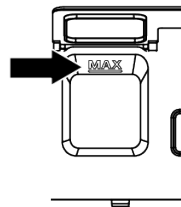

4. Close the lid of the compartment.
5. Close the detergent drawer by pushing lightly.
6. After closing the detergent drawer, the flashing dosage symbol () starts lighting up continuously.

7. It indicates that the compartments are filled successfully and the detergent drawer is in its place.

We recommend filling the liquid detergent compartment with liquid detergents that can be used in common for coloured and white laundry.

If the detergent symbol is flashing even though the detergent compartments are filled, the detergent drawer is not seated properly. Push the drawer so that it is fully seated.



WARNING


When the detergent drawer is filled with detergent and/or softener; do not pull or move the equipment, and do not tilt it on either side or back.

Before conducting these operations, the detergent drawer must always be removed from the machine.



If you wish to start the program while there is no detergent in the detergent drawer, liquid detergent dosage must be cancelled and washing with powder detergent is required.

Add only liquid detergent in the liquid detergent compartment No 1, and add only softener or alternative liquid detergent (depending on your choice) to the softener/alternative detergent compartment No. 2. For compartment No. 2, select softener or liquid detergent on the screen. If you want to make a change in this compartment after use, completely drain and clean the compartment of the softener or detergent and then add softener or alternative liquid detergent. Then, select softener or liquid detergent for Compartment No. 2 on the screen. Putting all kinds of liquid and powder chemicals together inside the compartments may damage your laundry or your product.

5.6.2 Dosage Selections, Cancellation or Use of Powder Detergent

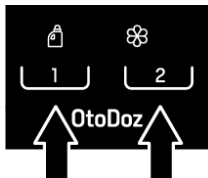

 The dosage selection buttons shown above are used to select the dosage and its amount.

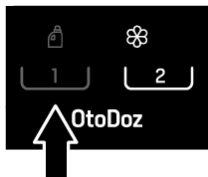

If you want to use powder detergent in a program where the liquid detergent dosing system is running, please cancel the liquid detergent dosing function selected for No. 1 or 2 on the screen. Then, add suitable amount of powder detergent into the powder detergent container provided with the product and put the container directly on the laundry inside the product.




The detergent drawer has no specific powder detergent section.

Never put powder detergent in the detergent drawer.

Put the powder detergent container on the topmost point of the laundry to prevent it contacting and thus harming the laundry.


If you want to use a liquid detergent different from the one in the liquid detergent compartments for just one time, please cancel the liquid detergent dosing function selected for No 1 or 2. Add desired liquid detergent into the powder detergent container and put the container directly on the laundry inside the product.

Selecting the Dosage for Liquid Detergent or Softener and Adjusting the Amount of Dosage:

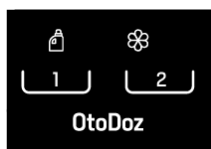

During first use, the default settings will be liquid detergent for compartment No.1 and softener for compartment No.2, as shown above.

In programs where you are allowed to use automated dosing by pressing dosage selection buttons (1 and 2), you can change the selections for liquid detergent and softener.

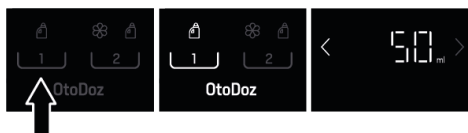

To activate the liquid detergent compartment No. 1, press the dosage button No.1 on the screen. The liquid detergent symbol No. 1 will turn on and the dosing amount in ml will be displayed on the information screen for a while. If you wish, you can use the left and right arrows (< / >) to save in the machine the amount recommended for the detergent you are using, or to change the saved value.

To deactivate the liquid detergent compartment No 1, press the same button again. The liquid detergent symbol will go off.



The compartment No. 2 is used only for softener or only for an alternative liquid detergent, depending on your choice. If you want to use an alternative liquid detergent instead of softener in this compartment, press the dosage button No 2. For 3 seconds. When the countdown "3-2-1" on the information screen goes off, the softener symbol will go off and the liquid

detergent symbol will turn on. After the change, the dosing amount in ml will be displayed on the information screen for a while. If you wish, you can use the left and right arrows (< / >) to save in the machine the amount recommended for the detergent you are using, or to change the saved value. Repeat the same procedure to go back to using softener.

When you are finished adjusting the dosing amount, you can press any button to exit the setting screen. If you do not press anything, the product will automatically exit this screen after a while. For all programmes, dosing will be performed based on the latest settings you have selected until you select a new setting.

Take into account the amount of laundry, the amount of soiling of the laundry and the water hardness for the use of sufficient amount of detergent in washing. For automatic dosing, in order for your machine to dose the appropriate amount of detergent, please define the recommended amounts given on the package of the detergent you use to the machine.

You can find out the water hardness from the water administration responsible for your location, or you can determine it by applying the water hardness test. Detergent manufacturers recommend using more detergent when the water hardness is high. Considering the water hardness, you can define a reference value between 15- 200 mL for 4- 5 kg of medium soiled laundry. The dosage amount will be adjusted automatically based on the sensed laundry characteristics.

For Soft / Medium water hardness:

Lightly Soiled: a mL.

Medium Soiled: **b mL.**

Heavily Soiled: c mL.

For hard water hardness:

Lightly Soiled: d mL.

Medium Soiled: **e mL.**

Heavily Soiled: f mL.

Detergent manufacturers provide usage recommendations similar to the table above. The value you must define to the machine is the medium soiled value. Based on the water hardness, define **b** or **e** value to the machine.

If the amount of laundry you will wash is different from 4-5 kg, you do not need to change the dosage setting. Your machine automatically adjusts the dosage amount based on the load amount.



If you change the detergent model you use, we recommend that you adjust the dosage again to achieve the best results.

5.6.3 Detergent and/or Softener Running Out

When the detergent or the softener put inside the detergent drawer finishes, the dosage symbol in the display flashes. When this symbol flashes, it is necessary to add the decreasing detergent or softener to the dosing tank. The product will be able to dose enough for 2-3 more cycles from the first moment the symbol flashes.

5.6.4 Filling Detergent or Softener into the Wrong Compartment

In case you fill the detergent or the softener in the wrong compartment, see "Cleaning the Detergent Drawer".

5.7 Tips for Efficient Washing

	Clothes			
	Light Colours and Whites	Colours	Black/Dark Colours	Delicates/Wool-lens/Silks
	(Recommended temperature range based on soil level: 40-90 °C)	(Recommended temperature range based on soil level: cool -40 °C)	(Recommended temperature range based on soil level: cool -40 °C)	(Recommended temperature range based on soil level: cool -30 °C)


Soiling Level	<p>Heavily Soiled (difficult stains such as grass, coffee, fruits and blood.)</p>	<p>It may be necessary to pre-treat the stains or perform prewash.</p> <p>Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.</p>	<p>Powder and liquid detergents recommended for colours can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Detergents which do not contain decolourant should be used.</p>	<p>Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for heavily soiled clothes.</p>	<p>Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.</p>
	<p>Normally Soiled (For example, stains caused by body on collars and cuffs)</p>	<p>Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes.</p>	<p>Powder and liquid detergents recommended for colours can be used at dosages recommended for normally soiled clothes. Detergents which do not contain decolourant should be used.</p>	<p>Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for moderately soiled clothes.</p>	<p>Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.</p>
	<p>Lightly Soiled (No visible stains exist.)</p>	<p>Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.</p>	<p>Powder and liquid detergents recommended for colours can be used at dosages recommended for lightly soiled clothes. Detergents which do not contain decolourant should be used.</p>	<p>Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for lightly soiled clothes.</p>	<p>Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.</p>

5.8 Displayed Programme Duration

You can view the programme duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, foaming, unbalanced load conditions, fluctuations in power supply, water pressure and programme settings, the programme duration is automatically adjusted while the programme is running.


SPECIAL CASE: At programme start of Cottons and Cotton Eco programmes, display shows the duration of half load. It is the most common use case. After programme starts, in 20-25 minutes actual load is detected by the machine. And if the detected load is higher than half load; washing programme will be adjusted accordingly and programme duration increased automatically. You can follow this change on the display.

6 Operating the Product



Please read the "Safety Instructions" section first!

6.1 Control Panel and Screen Symbols

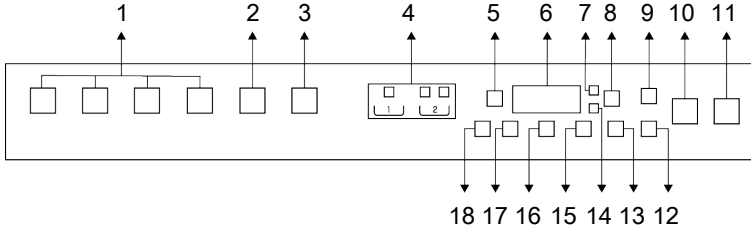

- | | |
|----------------------------------|---|
| 1 Main programs | 2 Downloaded programs |
| 3 OptiMix function | 4 Detergent and Softener Dosage selection buttons |
| 5 Selection button 1 | 6 Information screen |
| 7 Temperature indicator | 8 Selection button 2 |
| 9 Support Service button | 10 Start / Pause button |
| 11 On/Off button | 12 Remote Control button |
| 13 Child lock button | 14 Dosing unit indicator |
| 15 End time setting button | 16 Spin speed adjustment button |
| 17 Temperature adjustment button | 18 Wireless connection indicator |



The visuals used for machine description in this section are schematic and may not match exactly with the features of your machine.

6.2 Programme and Consumption Table

Program	Temperature °C	Maximum load (kg)	Water consumption (lt)	Energy consumption (kWh)	Max RPM	Auxiliary functions*****										Temperature °C	
						Fast+	Prodose	AntiCrease+	Steam	Extra Water	Prewash	AntiCrease	Soaking	Night Mode	AI-Sense		Pet Hair Removal
Eco 40-60	40***	10	67	0,701	1400	•											40-60
	40***	5	46	0,490	1400	•											40-60
	40***	2,5	35	0,281	1400	•											40-60
Gentle	40	4	65	0,85	800	•								•			Cold - 40
Express	30	10	75	0,25	1400	•								•			Cold - 90
Intense	40	10	95	1,20	1400	•								•			Cold - 90
Add Prg. *****																	
Duvet/Down Wear	60	-	10 0	1,60	800	•	•	•				•	•		•		Cold - 60

Curtain	40	2	98	0,90	800		*				*	*	*				*	Cold - 40
Hygiene+	90	9	12 5	3,00	1400		*	*									*	20-90
Dark Care/Jeans	40	5	86	1,05	1200	*	*	*	*	*	*	*	*				*	Cold - 40
Mix	40	4	83	1,10	800	*	*	*	*	*	*	*	*					Cold - 40
Shirt	60	4	70	1,40	800	*	*	*	*	*	*	*	*				*	Cold - 60
Outdoor/Sports	40	5	60	0,65	1200		*			*								Cold - 40
Woollens / Hand Wash	40	2	60	0,60	1200		*						*				*	Cold - 40
Underwear	30	1	78	0,30	600		*										*	Cold - 30
Steam Refresh		1	1,5	0,11	-			*										-
Cotton	90	10	98	2,75	1400	*	*	*	*	*	*	*	*	*	*	*	*	Cold - 90
	60	10	98	2,00	1400	*	*	*	*	*	*	*	*	*	*	*	*	Cold - 90
	40	10	95	1,20	1400	*	*	*	*	*	*	*	*	*	*	*	*	Cold - 90
Synthetic	60	4	76	1,60	1200	*	*	*	*	*	*	*	*	*	*	*	*	Cold - 60
	40	4	74	1,10	1200	*	*	*	*	*	*	*	*	*	*	*	*	Cold - 60
Towel	60	4	11 5	1,60	800		*				*	*					*	Cold - 60
Drum Clean	90	-	80	2,60	600			*										90

* : Selectable.

* : Automatically selected, cannot be cancelled.

*** : Eco 40-60 programme is a test programme according to 40 ° C temperature selection, EU regulation EU / 2019/2014 and EN 60456: 2016 / A11: 2020 standard.

***** : These programmes can be used with the HomeWhiz application. Energy consumption may increase due to connection.

***** : These auxiliary functions can be used by selecting the Programme Personalisation feature.

- : See the programme description for maximum load.



Please read Installation section of the user manual before first use.

The auxiliary functions in the table may vary according to the model of your machine.

Water and energy consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions, spin speed, and changes in electric voltage.

Selection patterns for auxiliary functions can be changed by the manufacturer company. New selection patterns can be added or the existing ones can be removed. The spin speed of your machine may vary according to the programme; this spin speed cannot exceed the max. spin speed of your machine.

The amount of noise and humidity varies according to the spin speed; when the higher spin speed is selected during the spinning phase, the laundry contains less moisture at the end of the programme but higher noise occurs.



You can see the washing duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, there may be a difference of 1-1.5 hours between the duration shown on the display and the actual duration of the wash cycle. Duration will be automatically updated soon after the washing starts.

Always select the lowest appropriate temperature. The most efficient programmes in terms of energy consumption are generally those that wash at low temperatures for a long time.

The spin speed information given at the program table indicates spin speed option shown on the control panel.

Consumption values (EN)

	Temperature Selection °C	Tightening Speed (rpm)	Capacity (kg)	Program duration (h:min)	Energy consumption (kWh/cycle)	Water consumption (litres/cycle)	Laundry temperature (°C)	% Of remaining humidity (%)
Eco 40-60	40	1351	10	03:58	0,701	67	36	52
	40	1351	5	02:59	0,490	46	30	52
	40	1351	2,5	02:59	0,281	35	24	56
Cotton	20	1400	10	03:40	0,750	95	20	53,9
	60	1400	10	03:40	2,000	98	60	53,9
Synthetic	40	1200	4	02:20	1,100	74	40	40
Express	30	1400	10	00:28	0,250	75	23	62

The consumption values given for programs other than the Echo 40-60 program are indicative only.


6.3 Programme Selection

1. Determine the programme suitable for the type, quantity and soiling level of the laundry in accordance with "Programme and consumption table".



Programmes are limited to the highest spin speed appropriate for that particular type of fabric. When selecting a programme, always consider the type of fabric, colour, soiling level and permissible water temperature.

2. Select the desired program on the screen.

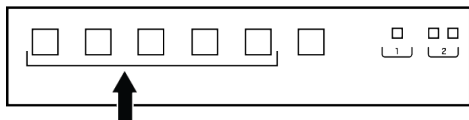

6.4 Additional Properties

• AI-Sense

Use to wash frequently washable cotton, synthetic or blended (cotton+synthetic) clothes. The programme senses the type, amount and soiling level of the laundry you put in the machine and automatically adjusts the water consumption, the programme duration and the amount of detergent via the automatic dosing feature. The maximum washing temperature in the Optimix function depending on the soiling level and laundry type is 90°C.

In the Quick program, washing performance may not be at the desired level for heavily soiled whites and stubborn stains (collar, sock soil, perspiration stain, etc.). In this case, it is recommended to select Intensive programme and set the temperature to 60°C.



Do not wash your woollen and delicate clothes in Quick or Intensive programmes.

In the Quick and Intensive Wash programmes, the temperature value and depending on the product model, the spin speed might be updated automatically during the washing cycle to protect your laundry based on the textile type detected.

With this function, programme durations may vary.

This function can only be selected in Delicate, Quick and Intensive Wash programmes.

You can wash your delicate clothes such as Cotton/Synthetic blended knitwear or hosiery with this function. It washes with more delicate washing action. Wash your clothes whose colour you want to preserve either at 20 degrees or by selecting the cold wash option.

Many types of clothing are correctly detected and safely washed in programme with the Optimix function.

• Automatic Extra Rinsing Feature

Your machine checks the water turbidity in some rinsing steps and adds up to 2 extra rinsing steps as needed to purify your clothes from detergent.

• WaterCare

When this function is activated, water inside the drum is sent to clothes with a shower effect through a special flap. Cycle durations shorten and a more sensitive and high performance washing is provided for your clothes. The special rinsing movement designed for delicate clothes (e.g. woollen) works with this technology to wash your laundry quite delicately. This function operated with the fast stirring movement for highly dirty cotton clothes cleans your clothes with higher performance.

The application time and period of this operation is designed to optimize the best result according to the features of the washing programmes. Generally, this system is activated at a point between 25 to 60 minutes into the wash cycle, depending on the load and temperature selection. In certain programmes, spraying system will be activated at the beginning of the cycle. The spraying system starts within 3 to 10 minutes in these programmes.

6.5 Main Programs

• Eco 40-60

In the Eco 40-60 programme, you may wash normally soiled cotton laundry that are specified to be washed together at 40°C or 60°C. This programme is the standard test programme according to the EU environmentally friendly design and energy labelling regulations.

Although this programme washes longer than other washing programmes, it is more efficient in terms of energy and water consumption. Actual water temperature may be different from the stated wash temperature. When you load the machine with less

laundry (e.g. ½ capacity or less), periods in programme stages may automatically get shorter. In this way, energy and water consumption would be much less.

- **Gentle**

Use to wash your woollen/delicate laundry. Select the appropriate temperature complying with the tag of your clothes. Your laundry will be washed with a gentle washing action in order not to damage the clothes.

- **Express**

Use this programme to wash your lightly soiled or unspotted cotton/synthetic clothes in a short time but not for towels or heavy cottons. When you load the machine with less than 2 kg of laundry, programme duration will drop to 14 minutes.

- **Intense**

Wash your durable laundry (sheets, bedlinen, towels, underwear, t-shirts, blouses, synthetic/cotton blended fabrics, etc.) in this programme.

6.6 Downloaded Programs

- **Add Prg.**

This is a special programme that allows you to download different programmes when you want to. At the start, there is a programme you can see with the HomeWhiz application as default. However, you can use the HomeWhiz application to select a programme from the predetermined programme set, and then change and use it.



If you want to use HomeWhiz feature and Remote Control function, you must select Downloaded Programme. Detailed information can be found in HomeWhiz Feature and Remote Control Function.

- **Cotton**

You can wash your durable cotton laundry (sheets, bedlinen, towels, bathrobes, underwear etc.) in this programme. When the quick wash function button is pressed, programme duration becomes notably shorter but effective washing performance is en-

sured with intense washing movements. If the quick wash function is not selected, effective washing and rinsing performance is ensured for your heavily soiled laundry.

- **Synthetic**

You can wash your laundry (such as shirts, blouses, synthetic/cotton blended fabrics etc.) in this programme. When the quick wash function button is pressed, the programme duration will be shortened significantly and effective washing performance is provided for your laundry that is not very dirty. If the quick wash function is not selected, effective washing and rinsing performance is ensured for your heavily soiled laundry.

- **Woollens / Hand Wash**

Use to wash your woollen/delicate laundry. Select the appropriate temperature complying with the tag of your clothes. Your laundry will be washed with a very gentle washing action in order not to damage the clothes.

- **Hygiene+**

Applying a steam step at the beginning of the programme allows to soften the dirt easily.

Use this programme for your laundry (baby clothes, bed sheets, bedlinen, underwear, etc. cotton items) that requires an anti-allergic and hygienic washing at high temperature with intensive and long washing cycle. The high level of hygiene is ensured thanks to the steam application before the programme, long heating duration and additional rinsing step.

- **Duvet/Down Wear**

Use this programme to wash your fibre duvets that bear "machine washable" tag. Check that you have loaded the duvet correctly in order not to damage the machine and the duvet. Remove the duvet cover before loading the duvet into the machine. Fold the duvet into two and load it into the machine. Load the duvet into the machine while paying attention that it will not contact the door gasket or the glass.

Besides, use this programme to wash your coats, vest, jackets etc. containing feathers with a “machine washable” label on them.



Do not load more than 1 double fibre duvet (200 x 200 cm). Do not wash your duvets, pillows and etc. that contain cotton filling in the machine.



Do not use the washing machine to wash materials such as carpets, rugs etc. Otherwise, your machine may be damaged permanently.

• Spin+Drain

You can use this program to remove the water on the garment/inside the machine.

• Rinse

Use when you want to rinse or starch separately.

• Steam Refresh

Use this programme to reduce the creases and ironing times of a small amount of unspotted cotton, synthetic or mixed laundry.



This is not a washing programme. Do not add chemicals such as detergent, bleach, stain remover, etc. to the detergent drawer during this program.

• Curtain

You can use this programme to wash your tulles and curtains. As their meshed texture causes excessive foaming, put little amount of detergent into the main washing compartment. Thanks to the special spin profile of the programme, tulles and curtains crease less. Do not load your curtains above the specified capacity in order not to damage them.



It is recommended to use special detergents produced for curtains in the powder detergent compartment in this programme.

• Shirt

This programme is used to wash the shirts made from cotton, synthetic and synthetic blended fabrics altogether. It reduces wrinkles. Steam is applied at the end of the programme to help the wrinkle reducing function. The special spin profile and steam applied at the end of the programme reduce the wrinkles on your shirts. When the quick wash function is selected, the Pre-treatment algorithm is executed.

- Apply the pre-treatment chemical on your garments directly or add it together with the detergent in the powder detergent compartment. Thus, you can obtain the same performance as you obtain with normal washing in a much shorter period of time. Usage life of your shirts increases. Do not use pre-wash detergent if you are planning to use delay function of your machine. Prewash detergent may pour out on your clothes and cause stains.

** It is recommended to operate the cycle with no more than 6 shirts to minimize wrinkles in your shirts using this cycle. When washing more than 6 shirts, there may be differences on the wrinkle levels and humidity on shirts at the end of cycle.

• Dark Care/Jeans

Use this programme to protect the colour of your dark-coloured garments or jeans. It performs high performance washing with special drum movement even if the temperature is low. It is recommended to use liquid detergent or woollen shampoo for dark coloured laundry. Do not wash your delicate clothes containing wool or etc.

• Drum Clean

Regularly clean (once every 1 to 2 months) the drum for ensuring the required hygiene. Steam is applied before the programme to soften the residues in the drum. Turn on the programme when the machine is completely empty. For better results, use powder anti-limescale (drum cleaning materials) suitable for washing machines when the powder detergent function is se-

lected. Leave the loading door half closed after the programme ends for the inside of the machine to dry.



This is not a washing programme. This is a maintenance programme. Do not turn this programme on when there is something inside the machine. When you attempt to operate, the machine automatically senses that there is load inside, and may quit or resume the programme as per the model of your machine. An effective cleaning is not achieved if the programme is resumed.

• Mix

Use to wash your cotton and synthetic clothes together without sorting them.

• Underwear

You can use this programme to wash delicate garments that are suitable for hand wash and delicate women's underwear. Small amount of garments must be washed in a washing net. Hooks, buttons etc. must be done up and zips must be zipped up.


• Outdoor/Sports

You can use this programme to wash sports and outdoors garments that contain cotton/synthetics mix and water repellent covers such as gore-tex etc. It makes sure your garments are washed gently thanks to special rotating movements.

• Towel

Use this programme to wash durable cotton laundry such as towels. Load the towels into the machine paying attention to place them in a way that they will not contact the door gasket or the glass.

6.7 Temperature Selection

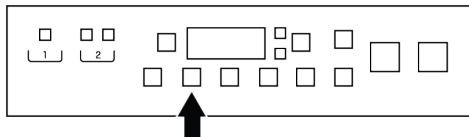

When you select a program and press the temperature setting screen, the screen will display the recommended temperature for that program. It is possible that the recommended temperature value is not the maximum temperature that can be selected for the current programme. Press the temperature adjustment button to change the temperature. Then use the "</>" symbols to select the permissible temperature value. If you are not allowed to increase or decrease the temperature, the relevant arrow will turn on partially.




No change can be made in programmes where temperature adjustment is not allowed.

You can change the temperature also after the washing cycle has started in the allowable washing steps using the procedure described above. If not allowed, when you press the temperature setting button, the selected temperature will be displayed on the screen but the symbols "< / >" will not be displayed and you will not be allowed to select a temperature.




In programs where OptiMix is used, the temperature may be updated automatically during the washing cycle to protect your laundry after necessary detections.


6.8 Spin Speed Selection

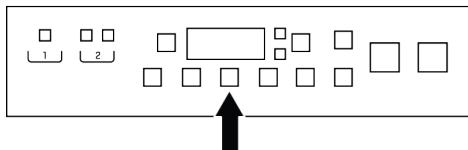

When you select a program and spin speed setting screen, the screen will display the recommended spin speed for that program. It is possible that the recommended spin speed value is not the maximum spin speed that can be selected for the current programme. Press the spin speed adjustment button to change the spin speed. Then use the "</>" symbols to select the permissible spin speed. If you are not al-

lowed to increase or decrease the spin speed value, the relevant arrow will turn on partially.

 In programs where OptiMix is used, the spin speed may be updated automatically during the washing cycle to protect your laundry after necessary detections, depending on the product model.

The display will then show the options "Rinse Hold 


" and "No Spin--" depending on the model of the device.

If you are not going to unload your laundry immediately after the programme completes, use Rinse Hold function in order to prevent your laundry from getting wrinkled when there is no water in the machine. This function holds the laundry in the final rinsing water.

If you want to spin your laundry after the Rinse Hold function:

1. Adjust the spin speed.
2. Press Start/Pause button. The programme will resume. Machine drains the water and spins the laundry.

If you want to drain the water at the end of the programme without spinning, use the No Spin function.

 No change can be made in programmes where spin speed adjustment is not allowed.

You can change the spin speed also after the washing cycle has started in the allowable washing steps using the procedure described above. If not allowed, when you press the spin speed setting button, the selected spin speed will be displayed on the screen but the symbols "< / >" will not be displayed and you will not be allowed to select a spin speed.

Rinse Hold

If you are not going to unload your clothes immediately after the program completes, use rinse hold function to keep your laundry

in the final rinsing water in order to prevent them from getting wrinkled when there is no water in the machine.


After performing this operation, adjust the desired spin speed for the laundry remaining in the water and press the Start/Pause button. The programme will resume. Water is drained, laundry is spun and the programme is completed.

If the Start/Pause button is pressed before the spin speed is set, water is drained and the program ends without spinning.

6.9 Auxiliary Function Selection

Before starting the program, select the desired auxiliary functions on the product display or the HomeWhiz application.

When a program is selected, the symbols corresponding to the additional functions selected along with that program will illuminate fully. If no additional function is selected, the Leds of these functions light up in half to indicate that they can be selected. The symbols of the functions that cannot be selected are dimmed.

 When you press an additional function that cannot be selected with the current program, the washer will emit a warning tone. Some functions cannot be selected together. If a second auxiliary function conflicting with the first one is selected before starting the machine, the function selected first will be cancelled and the second auxiliary function selection will remain active. An auxiliary function that is not compatible with the programme cannot be selected (See "Program and Consumption Table"). Some programmes have auxiliary functions that must be operated simultaneously. Those functions cannot be cancelled.

6.9.1 Auxiliary Functions

• Prewash

A Prewash is only worthwhile for heavily soiled laundry. Not using the Prewash will save energy, water, detergent and time.

• Extra Water

This function allows you to wash with plenty of water and rinse your laundry in all the programmes indicated as selectable in the Programme and consumption table. Use this function for delicate clothes that crease easily.



When you select this function, load your machine with half of the maximum load specified in the programme table.

• Extra Rinse

This function enables the product to make additional rinsing in addition to the one already made after the main wash. Thus, the risk for sensitive skins (babies, allergic skins, etc.) to be effected by the minimal detergent remnants on the laundry can be reduced.

• AntiCrease

This function makes the garments crease less when being washed. Rotational movements are decreased and spin speed is limited to prevent creasing. In addition, washing is done with a higher water level.

• AntiCrease+

When the function is selected, the drum rotates for up to 8 hours for preventing the laundry from creasing at the end of the programme. You can cancel the programme and take your laundry out at any time during the 8-hour duration. Press the function selection key or the machine on/off key to cancel the function. The programme follow-up light will remain on until the function is cancelled or the step is complete. If the function is not cancelled, it will be active in the subsequent washing cycles as well.

• Fast+

After selecting a programme, you can press the Quick Wash setting button to shorten the programme duration. For some programmes, the duration can shorten by over 50%. Despite this, a good washing performance is achieved thanks to the changed algorithm.

While it differs with each programme, when you press the Quick Wash button once, the programme duration will drop to a certain level. If you press the same button for the second time, it will drop to the minimum duration.

Do not use Quick Wash adjustment button when washing heavily soiled laundry for a better washing performance.

Use the Quick Wash button for Mildly and Lightly soiled laundry and shorten the programme duration.

• Night Mode

Use to wash the cottons with less energy consumption and silently. Spin steps are cancelled for a silent wash and the cycle ends with the Rinse Hold step. After completion of the programme, run Spin cycle to spin the laundry.

• Soaking

The Soaking in Water auxiliary function ensures that the stains that have penetrated into the laundry are cleaned better by soaking the laundry in detergent water before the washing process starts.

• Pet Hair Removal

This function helps to remove pet hair that is on your garments more effectively. When you select this function, Prewash and Extra Rinse programmes are added to the normal programme. Thus, washing is performed with more water and the pet hair is removed more effectively.



When you select this function, prewash process is done with liquid detergent.

• Steam

This function helps to reduce the creases of your cotton, synthetic and mixed clothes, shorten the ironing time and remove the dirt by softening.

* Under conditions where the steam function is applied at the end of the programme, your laundry may be warmer at the end of the washing. This is expected within the programme working conditions.



When you activate the steam function, do not use liquid detergent if there is no liquid container or liquid detergent dosing feature. There is the risk of staining of the clothes.

• Prodose

You can use these auxiliary function buttons to change your detergent and softener dosage preferences and dosage amounts. For detailed information, see "Dosage Selections, Cancellation or Use of Powder Detergent"

• Remote Control

You can use this auxiliary function button to connect your product to smart devices. For detailed information, see HomeWhiz Feature and Remote Control Function.

• Customized Program

This auxiliary function can only be used for Cotton and Synthetic programmes together with the HomeWhiz application. If this function is activated under the HomeWhiz "Personalize" menu, you can add up to five additional rinsing steps to the program. You can select and use some auxiliary functions even though they are not found on your product. You can increase and decrease the time of the Cotton and Synthetic programmes within a safe range.



When the Specialised Programme auxiliary function is selected, the washing performance and energy consumption will be different than the declared value.

6.9.2 Functions/Programmes Selected by Pressing the Function Keys for 3 Seconds

• Child Lock

Use Child Lock function to prevent children from tampering with the machine. Thus you can avoid any changes in a running programme.



You can switch on and off the machine with On / Off button when the Child Lock is active. When you switch on the machine again, programme will resume from where it has stopped.

If you press buttons while child lock is enabled, an audible warning will be heard, Child Lock symbol will flash and "CL" will be displayed on the information screen. If you press the buttons repeatedly, the product will switch to silent mode for a while.

To activate the child lock:

Press and hold the Child lock button for 3 seconds. When the countdown "3-2-1-On" on the display comes to an end, the child lock symbol will switch from half-lit to fully-lit, indicating that it is enabled. When this notification is displayed, stop pressing the child lock button.

To deactivate the child lock:

Press and hold the Child lock button for 3 seconds. When the countdown "3-2-1- OFF" on the display comes to an end, the child lock symbol will switch from fully-lit to half-lit, indicating that it is enabled.

• Wireless Connection

You can match your machine and your smart devices with the wireless connection. This way, you can use your smart device to get information about your machine and control it.

To activate wireless connection:

Press and hold Remote Control button for 3 seconds. After countdown "3-2-1" on the display ends, "On" symbol appears. When this notification is displayed stop pressing the remote control button. The wireless connection icon blinks when the product is connecting the internet. If connection is successful, icon will remain on.

To deactivate wireless connection:

Press and hold Remote Control button for 3 seconds. Countdown "3-2-1" will be displayed, and then "Off" symbol will appear on the display.



To be able to enable wireless connection, machine setup should be completed through HomeWhiz application. After setup, wireless connection will be enabled automatically if you press "Remote Control" button.

6.10 End Time

Time display


When the end time function is selected, the time until the start of the program is shown like 24h, 23h etc. for delays between 24 and 20 hours; for shorter delays, it is shown as hours and minutes as is 19:30.




Programme duration may differ from the values in section "Programme and consumption table" depending on the water pressure, water hardness and temperature, ambient temperature, amount and the type of laundry, auxiliary functions selected and the changes at the mains voltage.

After a certain period of time after the end time function is activated, the machine goes into standby mode and some LEDs on the screen turn off. If there is any user input, the LEDs will turn on again.


With the End Time function, the start-up of the programme may be delayed up to 24 hours. After pressing End Time Setting button, the programme's estimated ending time is displayed. If the End Time is set, End Time Setting indicator is illuminated fully.

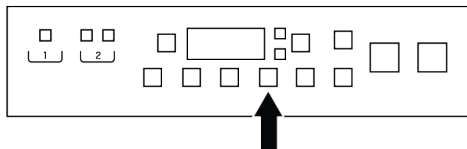

In order for the End Time function to be activated and the programme to be completed at the end of the specified time, you must press Start/Pause button after adjusting the time.

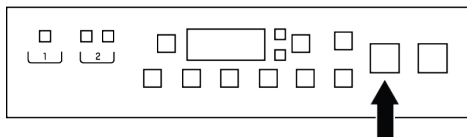

If you want to cancel the End Time function, turn off and on the product by pressing the On/Off button.

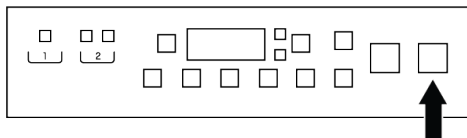

1. Open the loading door, place the laundry and put detergent, etc.
2. Select the washing programme, temperature, spin speed and, if required, the auxiliary functions.
3. After pressing the End Time Adjustment button, use the right and left arrows (< / >) on the information screen to set an end time. End Time Setting indicator illuminates fully.
4. Press Start/Pause button. Time countdown starts.




Additional laundry can be added into the machine during the End Time countdown. At the end of the countdown, the End Time Adjustment indicator will go off, the washing cycle will start and the duration of the selected program will be displayed.

If you open the door while this function is running, the countdown will switch to pause mode. Press the Start / Pause button again to resume the program.

6.11 Starting the Programme

1. Press Start / Pause button to start the programme.

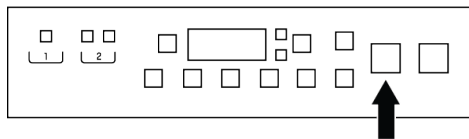

2. Once the washing cycle starts, the Start/Pause button will turn blue and the loading door will be locked.
3. After the washing cycle has started, please check the HomeWhiz application to see the current step.



If no programme is started or no button is pressed within 10 minutes during programme selection process, the product will automatically turn off. Display and all indicators turn off.

If you press On / Off button, the default selected programme information is displayed.

6.12 Loading Door Lock

There is a locking system on the loading door of the machine that prevents opening of the loading door in cases when the water level is unsuitable.

Opening the loading door in case of power failure:




In case of a power failure, you can use the loading door emergency handle under the pump filter lid to manually open the loading door.




Before opening the loading door, make sure that there is no water in the machine to avoid flooding.

1. Turn off and unplug the appliance.
2. Pull the board plate cover to open it.

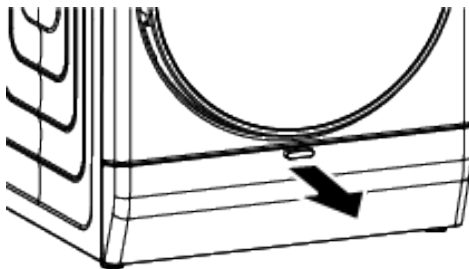

3. Pull down the loading door emergency handle with a tool (e.g. a screwdriver) and release. Then open the loading door.

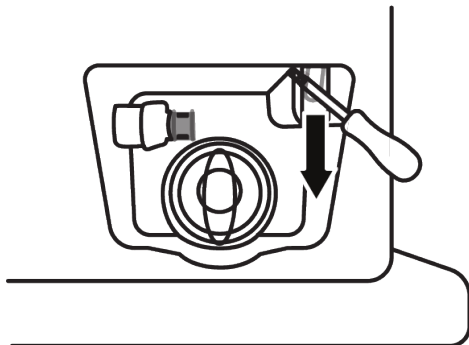


4. If the loading door does not open then repeat the previous step.

6.13 Changing the Selections After Programme has Started

Adding laundry after the programme has started:

If the water level in the machine is suitable when you press Start/Pause button, the door lock will be deactivated and the door will open, allowing you to add garments. After adding garments, close the door and press Start/Pause button once again to resume the washing cycle.

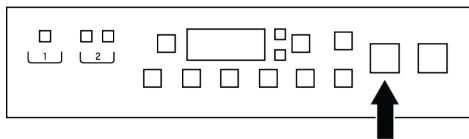


If the water level in the machine is not suitable when you press Start/Pause button, the door lock cannot be deactivated.

i If the temperature of the water inside the machine is above 50°C, you cannot deactivate the door lock for safety reasons, even if the water level is suitable.

Switching the machine to pause mode:

Press the Start/Pause button to switch the machine to pause mode. Pause symbol will flash on the display.

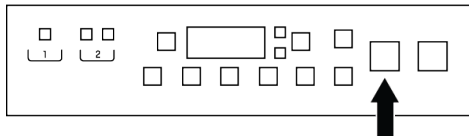

Changing the programme selection after programme has started:

Programme cannot be changed when a programme is running. You need to pause the operating programme if the Child Lock is not active and select a new programme. This action will cancel the current programme.

i The selected programme starts anew.

Changing the auxiliary function, speed and temperature:


Depending on the step the programme has reached, you can cancel or activate the auxiliary functions. See "Auxiliary Function Selection"

You can also change the speed and temperature settings. See "Spin Speed Selection" and "Temperature Selection".

i It gives out an audio warning if change is not allowed.

6.14 Cancelling the Programme

When the machine is turned off and on, the programme gets cancelled. Press and hold On/Off button for 3 seconds. The display will show a countdown "3- 2- 1".

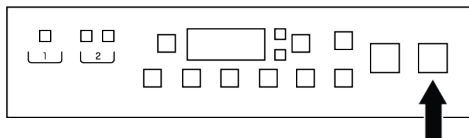

i If you want to open the loading door after cancelling the program but you cannot do so because the water level in the machine is above the door level, please activate Remote Control and download the Spin+Pump program from the Settings menu, then run this program to drain the water in the machine.

 
6.15 End of Programme

End warning appears on the display when the programme is completed.

The product automatically shuts down if no buttons are pressed for 10 minutes. Display and all indicators are turned off.

When you press the On/Off button, the selections made for the last washing cycle will be displayed.

6.16 Screen Brightness Adjustment



According to the environment where your machine is installed, press and hold the buttons shown above simultaneously and change screen brightness after the count-down “3-2-1”; select one of the of the 2 brightness levels that suits you.

6.17 HomeWhiz Feature and Remote Control Function

You can check your washing machine from smart devices and get information about the status of your machine thanks to the HomeWhiz function. You can carry out many operations on your machine from your smart device by using the HomeWhiz application. Moreover, you can use certain properties only with the HomeWhiz Function.

You must download the HomeWhiz application from the app store of your smart device to use the Wifi feature of your machine.

To use the app, make sure your smart device is connected to the internet.

If you are using the app for the first time, complete user account registration by following the directions on the app. You can use all HomeWhiz featured products in your home through this account after registration is complete.

The , Bluetooth of your smart device should be on and your device should be connected to the internet during setup. Your smart device should be close to the washing machine. After the setup, the Bluetooth can be turned off or your smart device does not need to be close to the washing machine. You may use your product provided that your smart device is connected to internet. You can tap the “Devices” tab in the application to view appliances paired with your account. You may perform the user pairing operation of these products on this page.

After the app is setup, with the HomeWhiz Function, your washing machine can give you instant status notifications via your smart device.

Your washing machine will send you notifications over HomeWhiz application in the following cases:

- At the end of the programme,
- When the door of the washing machine is opened,
- In case of water cut warning,
- In case of security warning,



To utilize the HomeWhiz feature, ensure that the HomeWhiz app is installed on your smart device and that your washing machine is connected to your home Wi-Fi network. When your washing machine is not connected to the network, it operates like a machine without HomeWhiz function.

Your product shall run with a connection to the wireless network in your home network. The controls made by means of the application will be enabled through this network. Therefore, the wireless signal strength near the machine's location must be adequate.

Operates at HomeWhiz 2.4 GHz frequency band.

Please visit www.homewhiz.com link to learn which Android and IOS versions are supported by HomeWhiz application.




All safety measures described in the "**GENERAL SAFETY INSTRUCTIONS**" titled section of the user manual are also valid for remote operation with HomeWhiz function.


6.17.1 HomeWhiz Setup

A connection should be set between your product and the app in order for the app to function. Follow the steps below to establish this connection.

1. If you are adding a device for the first time, touch "Appliances" tab on the HomeWhiz Application. Select "ADD APPLIANCE" (touch here for setting up a new appliance) button in the upper right corner. Perform the setup by following both the steps below and the steps in the HomeWhiz Application.
2. To start the setup, make sure that your machine is turned on. Press and hold the On/Off button and the Remote Control Function button simultaneously for 3 seconds to switch your machine to HomeWhiz setup mode.

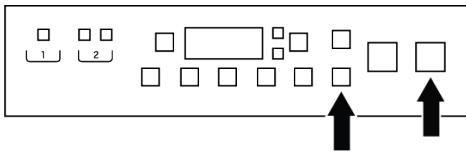

3. During the HomeWhiz setup process, an animation will display on the screen, and the Wireless Connection icon will continue to blink until your machine successfully establishes an internet connection. Only the On/Off button will be active in this mode. Other buttons will be inactive.

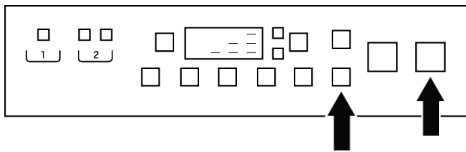


4. Follow the instructions on the display of HomeWhiz application.
5. Wait until the installation is complete. When setup is complete, give your washing machine a name. Now, you can see the product you have added to the HomeWhiz Application.



Your washing machine will automatically turn off if you cannot realize the setup successfully within 5 minutes. In this case, you have to start the setup process all over again. If the problem continues, please contact the Authorised Service.

You can use your washing machine with more than one smart device. To do this, download the HomeWhiz app on the other smart device as well. When you launch the app, you will need to log in with the account you previously created and paired with your washing machine. Otherwise, please read "Setting up a washing machine that is connected to someone else's account".

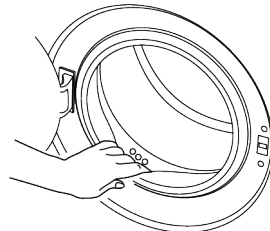

HomeWhiz Application may require you to type the product number shown on the product label. You can find the product label inside the product door. The product number will be shown on this label.



6.17.2 Setting up a Washing Machine Connected to Someone Else's Account

If the washing machine you want to use was previously introduced to the system with someone else's account, you must establish a new connection between your HomeWhiz Application and the product.

1. Download HomeWhiz Application on the new smart device you want to use.
2. Create a new account and log in to this account on the HomeWhiz app.
3. Follow the steps described in HomeWhiz Setup Setup and proceed with the setup procedure.




Given that your product's HomeWhiz Feature and Remote Control functionality operate via either Bluetooth or Wi-Fi technology, depending on your product model, it's important to note that only one HomeWhiz application can control your product at any given moment.

6.17.3 Deleting the HomeWhiz Account Match

Follow the following steps in order to delete a washing machine previously matched with someone else's account.

1. Turn on your machine by using the On/Off button.
2. While the machine is on, press and hold the Remote Control and Temperature Adjustment button for 5 seconds.

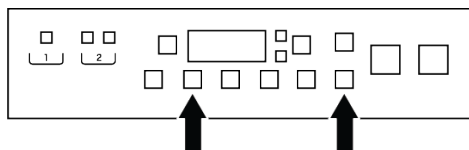

3. You will hear warning sound from the product to notify your request after the countdown on the screen. Deleting the match will take a few seconds.

After this operation, you cannot use the HomeWhiz function of your washing machine until you do another setup.

Your product does not need to be connected to the internet in order to delete an account matching. Your request will be received. This matching will be automatically deleted when the product is first connected to the internet.

6.17.4 Remote Control Function and Its Use

After HomeWhiz setup, Wifi will automatically turn on. To activate or deactivate the Wifi connection, please see "Wireless Connection".

If you turn off and on your machine while wireless connection is active, it will automatically reconnect. In cases of changing your network password or turning the modem off, the wireless connection will automatically turn off. For this reason, you will need to turn on the wireless connection again if you want to use the Remote Control function.

You can check the wireless connection symbol on the display to track your connection status. If the symbol is continuously on, it means you have internet connection. If the symbol is blinking, it means the machine is trying to connect. If the symbol is off, you have no connection.



When the wireless connection is on in your product, Remote Control function will be selectable.

If the Remote Control function cannot be selected, check the connection status. If the connection cannot be established, repeat the initial setup settings on the appliance. The Remote Control symbol will turn blue when enabled and will turn on partially when disabled.

If the door is opened while the Remote Control function is enabled, Remote Control will be cancelled.

If you want to control your washing machine remotely, you must activate the remote control function by pressing the Remote Control button on the control panel. While Remote Control is enabled, you can use the keys on the washing machine. And all functions except child lock can be managed through the application.

You can follow whether the Remote Control function is on or off through the function indicator on the display.

If the Remote Control function is Off, all the operations are handled on the washing machine and only status follow-up is allowed on the application.

Remote Control function may not be activated if the remote connection is off or the product door is on.

Once you enable this feature on your washing machine, it stays active under most conditions, providing you with the capability to control your machine via the internet.

This functionality is available whether the machine is powered on or off, and can be accessed from any location.

In certain cases, it deactivates itself for safety reasons:

- When your washing machine undergoes a power interruption.
- When the door of the washing machine is opened,.
- When the product is off.

6.17.5 Troubleshooting

Do the following if you have a problem with controlling or connection. Observe whether the problem persists or not after the action you have performed.

1. Check whether your smart device is connected to the relevant home network.
2. Restart the product application.
3. Turn Bluetooth or Wi-Fi off and on via the control panel, depending on the model of your product.
4. If the connection cannot be established with the above processes, repeat the initial set-up settings on the washing machine.

If the problem persists, consult an Authorised Service Agent.

6.18 Drum Illumination

Drum illumination lamp of your machine will light up during programme selection. The lamp will go off 10 minutes after the programme starts. If no programme is started or no key is pressed within 10 minutes during programme selection process, the drum illumination lamp will go off.

Drum illumination lamp of your machine will light up after the programme is completed. When you turn off your machine, the lamp turns off. The drum illumination lamp will go off if you do not press any button within 10 minutes after the programme has ended.

7 Maintenance and Cleaning



Please read the "Safety Instructions" section first!

Service life of your product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

7.1 Cleaning the Detergent Drawer

When to clean

- When you open the dosing tank cover and see a thickened non-fluid detergent or softener,
- If you are not satisfied with the washing results, it may be that the detergent or softener has become stiff and therefore cannot be taken into the washing area,

- If the liquid in the tank does not decrease although dosing is selected and you do not load detergents or softeners for a long time,
- If you want to change the washing ingredients you have filled in the chamber (for example, if you are not satisfied with the detergent and do not want to use it) or if you have done incorrect loading (for example, if you have placed detergent or softener in the detergent tank),
- If a different brand of detergent or softener will be added,
- If a washing agent with different specifications (e.g. if detergent is added for coloured ones when there is detergent in the tank for whites) is added,


- If washing agents of different concentrations are added,
- If the new softener has the same specifications but only a different scent, (it should be noted that the scent of the mixture will be different if it is added without cleaning the remaining softener),
- If it is not going to be used for a long time (e.g. at the time of moving to the summer house and at the time of return, for 3 months or more), the liquid washing agent may become denser and may become stiffer at the end, and may not make dosing although the system indicates full.

Cleaning:


Before starting cleaning, unplug your appliance by pressing the On/Off button.



It is recommended to wear a suitable glove so that you do not come into direct contact with the detergent and other washing materials that you will empty from the detergent drawer.

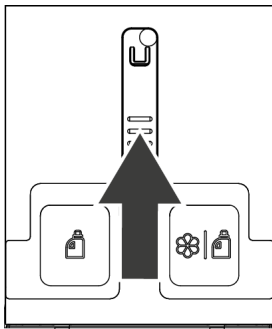


1. Press the grey part in the middle of the detergent drawer to pull it towards you and remove it.

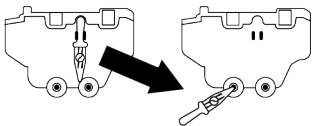

2. Remove the drain stick located at the back of the drawer from its slot.

3. Place the slot behind the detergent drawer to be emptied towards the inside of the compartment to be emptied.
4. Gently push the drain stick into the slot behind the detergent compartment.
5. The detergent will start to pour into the container.
6. The same is carried out for the softener compartment.

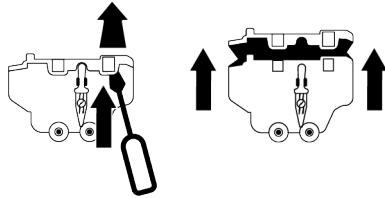

7. Use your finger or a flat-headed screwdriver to remove the tabs (x2) at the back, which connect the detergent compartment cover to the compartment. Then, wash the inside of the drawer.
8. Once the washing process is completed, fit the front side of the compartment cover into the seat on the front side of the drawer. Then, push the back against the compartment to ensure that both tabs are fitted into their place in the drawer compartment. If the guides do not fit, liquid may spill from the drawer, or the detergent box may get trapped in the drawer rail or move in difficulty. Therefore, make sure that the guides are firmly seated.
9. Insert the drain stick back into its slot in the back of the drawer.
10. Refit the drawer by paying attention to its slot and slides and push the drawer to close. Once detergents and softeners are added, they will be ready for use in dosed programs.


7.2 Cleaning the Loading Door and the Drum

For products with drum cleaning programme, please see the Operating the product section.



Repeat Drum Cleaning process in every 2 months.

NOTICE: Use an anti-limescale suitable for the washing machines.

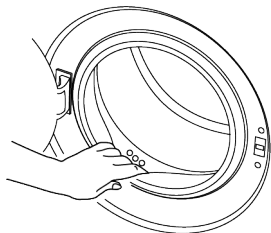

After every washing make sure that no foreign substance is left in the product. If the holes on the door gasket shown in the figure is blocked, open the holes using a toothpick.

Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel.

Never use steel wool or wire wool. These will damage the painted, chrome coated and plastic surfaces.

We recommend you to wipe the door gasket with a dry and clean cloth at the end of the programme. This will remove residues on the door gasket in your machine and prevent formation of malodours.


7.3 Cleaning the Body and Control Panel

Wipe the body of the product with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth.

Use only a soft and damp cloth to clean the control panel. Do not use cleaning products that contain bleach

7.4 Cleaning the Water Intake Filters

There is a filter at the end of each water intake valve at the rear of the product and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the product. Filters should be cleaned if they are dirty.

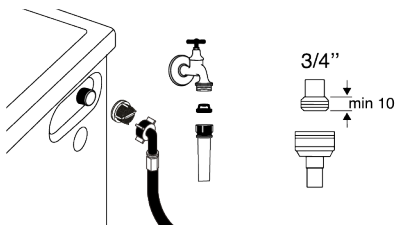

1. Close the taps.
2. Remove the nuts of the water intake hoses to access the filters on the water intake valves and clean them with an appropriate brush. If the filters are too dirty, remove them from their places with a pliers and clean in this way.
3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
4. Replace the gaskets and filters carefully and tighten their nuts by hand.

7.5 Draining Remaining Water and Cleaning the Pump Filter

The filter system in your product prevents solid items such as buttons, coins and fabric fibres clogging the pump impeller during draining of washing water. Thus, the water will be drained without any problem and the service life of the pump will extend.

If the product fails to drain water inside it, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter.

In addition, prior to transporting the product (e.g., when moving to another house) water should be drained completely.

**NOTE:**

Foreign substances left in the pump filter may damage your product or may cause noise problem.

If you live in areas prone to frost, remember to turn off the water tap, disconnect the main hose, and drain the water from the product when it's not in use.

After each use, turn off the tap to which the mains hose is connected.


In order to clean the dirty filter and drain the water:

Unplug the product to cut off the supply power.




Temperature of the water inside the product may rise up to 90 °C. To avoid the risk of scalding, clean the filter after the water inside the product is cooled down.

1. Pull the board plate cover towards yourself to open it.

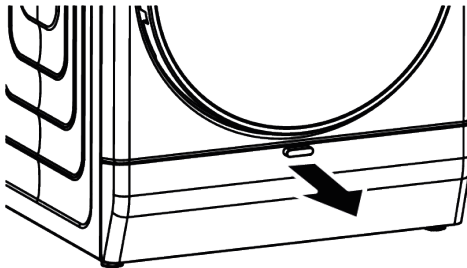

2. Follow the below procedures in order to drain water.

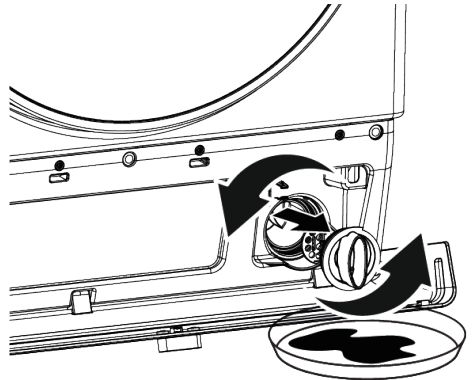If the product has an emergency water draining hose, in order to drain the water:

- Place a large container at the end of the hose to collect the water from the filter.
- When the pump filter starts leaking water loosen it by turning (opposite clockwise). Fill the running water to the container you placed in front of the filter. Keep a cloth ready to clean the water that may spill.
- Completely turn and remove the pump filter when the water in the product leaks out.

1. Clean any residues inside the filter as well as fibres, if any, around the pump impeller region.
2. Replace the filter.
3. Close the cover of the board plate.

8 Troubleshooting



Please read the "Safety Instructions" section first!

Programmes do not start after the loading door is closed.

- Start / Pause /Cancel button might not be pressed. >>> * Press the Start / Pause /Cancel button.

- It may be difficult to close the loading door in case of excessive loading. >>> Reduce the amount of laundry and make sure that the loading door is closed properly.

Programme cannot be started or selected.

- The product has switched to self-protection mode due to a supply problem (line voltage, water pressure, etc.). >>> Depending on the product model, select another program by turning the Program Selection button or pressing and holding

the On/Off button for 3 seconds to cancel the program. Previous programme will be cancelled. See Cancelling the Programme

Water inside the product.

- Some water has remained in the product due to the quality control processes in the production. >>> This is not a failure; water is not harmful to the product.

The product does not take water in.

- Tap is turned off. >>> Turn on the taps.
- Water inlet hose is bent. >>> Flatten the hose.
- Water inlet filter is clogged. >>> Clean the filter.
- Loading door is not closed. >>> Close the door.

The product does not drain water.

- Water drain hose is clogged or twisted. >>> Clean or flatten the hose.
- Pump filter is clogged. >>> Clean the pump filter.

Product vibrates or makes noise.

- Product is standing unbalanced. >>> Adjust the stands to balance the product.
- A hard substance has entered into the pump filter. >>> Clean the pump filter.
- Transportation safety bolts are not removed. >>> Remove the transportation safety bolts.
- Laundry quantity in the product is too little. >>> Add more laundry to the product.
- Excessive laundry is loaded in the product. >>> Take out some of the laundry from the product or distribute the load by hand to balance it homogeneously in the product.
- Product is leaning on a rigid item. >>> Make sure that the product is not leaning on anything.

There is water leaking from the bottom of the product.

- Water drain hose is clogged or twisted. >>> Clean or flatten the hose.
- Pump filter is clogged. >>> Clean the pump filter.

Product stopped shortly after the programme started.

- Machine has stopped temporarily due to low voltage. >>> Product will resume running when the voltage restores to the normal level.

Product directly drains the water it takes in.

- Draining hose is not at adequate height. >>> Connect the water draining hose as described in the user manual.

No water can be seen in the product during washing.

- Water is inside the invisible part of the product. >>> This is not a failure.

Loading door cannot be opened.

- Loading door lock is activated because of the water level in the product. >>> Drain the water by running the Pump or Spin programme.
- Product is heating up the water or it is at the spinning cycle. >>> Wait until the programme completes.
- Loading door may be stuck because of the pressure it is subjected to. >>> Grab the handle and push and pull the loading door to release and open it.
- If there is no power, loading door of the product will not open. >>> To open the loading door, open the pump filter cap and pull down the emergency handle positioned at the rear side of the said cap. See Loading Door Lock

Washing takes longer than specified in the user manual. (*)

- Water pressure is low. >>> Product waits until taking in adequate amount of water to prevent poor washing quality due to the decreased amount of water. Therefore, the washing time extends.
- Voltage is low. >>> Washing time is prolonged to avoid poor washing results when the supply voltage is low.
- Input temperature of water is low. >>> Required time to heat up the water extends in cold seasons. Also, washing time can be lengthened to avoid poor washing results.

- Number of rinses and/or amount of rinsing water have increased. >>> Product increases the amount of rinsing water when good rinsing is needed and adds an extra rinsing step if necessary.
- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

Programme duration does not countdown. (On models with display) (*)

- Timer may stop during water intake. >>> Timer indicator will not countdown until the product takes in adequate amount of water. The product will wait until there is sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this.
- Timer may stop during heating step. >>> Timer indicator will not countdown until the product reaches the selected temperature.
- Timer may stop during spinning step. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.

Programme duration does not countdown. (*)

- There is unbalanced load in the product. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.

Product does not switch to spinning step. (*)

- There is unbalanced load in the product. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.
- The product will not spin if water is not drained completely. >>> Check the filter and the draining hose.

- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

Washing performance is poor: Laundry turns gray. ()**

- Insufficient amount of detergent has been used over a long period of time. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.
- Washing has been made at low temperatures for a long time. >>> Select the proper temperature for the laundry to be washed.
- Insufficient amount of detergent is used with hard water. >>> Using insufficient amount of detergent with hard water causes the soil to stick on the cloth and this turns the cloth into gray in time. It is difficult to eliminate graying once it happens. Use the recommended amount of detergent appropriate for water hardness and the laundry.
- Excessive amount of detergent is used. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.

Washing performance is poor: Stains persist or the laundry is not whitened. ()**

- Insufficient amount of detergent is used. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.
- Excessive laundry is loaded in. >>> Do not load the product in excess. Load with amounts recommended in the "Programme and consumption table".
- Wrong programme and temperature were selected. >>> Select the proper programme and temperature for the laundry to be washed.
- Wrong type of detergent is used. >>> Use original detergent appropriate for the product.

- Excessive amount of detergent is used. >>> Put the detergent in the correct compartment. Do not mix the bleaching agent and the detergent with each other.

Washing performance is poor: Oily stains appeared on the laundry. ()**

- Regular drum cleaning is not applied. >>> Clean the drum regularly. For this procedure, see Cleaning the Loading Door and the Drum [► 42]

Washing performance is poor: Clothes smell unpleasantly. ()**

- Odours and bacteria layers are formed on the drum as a result of continuous washing at lower temperatures and/or in short programmes. >>> Leave the detergent drawer as well as the loading door of the product ajar after each washing. Thus, a humid environment favourable for bacteria cannot occur in the machine.
- Detergent and softener dosage setting may be in low level. >>> Adjust the detergent and dosing amount according to the recommended amount on the packaging of the detergent and softener used.

Colour of the clothes faded. ()**

- Excessive laundry was loaded in. >>> Do not load the product in excess.
- Detergent in use is damp. >>> Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
- A higher temperature was selected. >>> Select the proper programme and temperature according to the type and soiling degree of the laundry.

Washing machine does not rinse well.

- The amount, brand and storage conditions of the detergent used are inappropriate. >>> Use a detergent appropriate for the washing machine and your laundry. Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.

- Detergent and softener were put in the wrong compartment. >>> In this case, the product will take in detergent in the softener step. Put the detergent and the softener in the correct compartment.
- While softener is selected, there is detergent in the softener compartment. >>> In this case, the product will take in detergent in the softener step. Check your dosage selections.
- Detergent dosage setting may be in high level. >>> Adjust the detergent dosing amount according to the recommended amount on the packaging of the detergent used.
- Pump filter is clogged. >>> Check the filter.
- Draining hose is folded. >>> Check the drain hose.

Laundry became stiff after washing. ()**

- Insufficient amount of detergent is used. >>> Using insufficient amount of detergent for the water hardness can cause the laundry to become stiff in time. Use appropriate amount of detergent according to the water hardness.
- Detergent and softener were put in the wrong compartment. >>> In this case, the product will take in detergent in the softener step. Put the detergent and the softener in the correct compartment.
- While softener is selected, there is detergent in the softener compartment. >>> In this case, the product will take in detergent in the softener step. Check your dosage selections.
- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.

Laundry does not smell like the softener. ()**

- Detergent and softener were put in the wrong compartment. >>> In this case, the product will take in detergent in the softener step. Put the detergent and the softener in the correct compartment.

- While softener is selected, there is detergent in the softener compartment. >>> In this case, the product will take in detergent in the softener step. Check your dosage selections.
- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.
- Softener dosage setting may be in low level. >>> Adjust the softener dosing amount according to the recommended amount on the packaging of the softener used.
- Some meshed laundry such as tulle may foam too much because of their texture. >>> Use smaller amounts of detergent for this type of item.
- Detergent was put in the wrong compartment. >>> Make sure you place the detergent in the appropriate compartment.

Foam is overflowing from the detergent drawer.

- Too much detergent is used. >>> Mix 1 tablespoonful softener and ½ l water and pour into the main wash compartment of the detergent drawer. >>> Put detergent into the product suitable for the programmes and maximum loads indicated in the “Programme and consumption table”. When you use additional chemicals (stain removers, bleaches and etc.), reduce the amount of detergent.

Detergent residue in the detergent drawer.

(**)

- Detergent has gotten damp. >>> Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
- Water pressure is low. >>> Check the water pressure.
- There is a problem with the detergent drawer valves. >>> Call the Authorised Service Agent.
- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.
- Regular drum cleaning is not applied. >>> Clean the drum regularly. For this procedure, see Cleaning the Loading Door and the Drum [► 42]

Too much foam forms inside the product.

(**)

- Improper detergents for the washing machine is used. >>> Use detergents appropriate for the washing machine.
- Excessive amount of detergent is used. >>> Use only sufficient amount of detergent.
- Detergent was stored under improper conditions. >>> Store detergent in a closed and dry location. Do not store in excessively hot places.

Laundry remains wet at the end of the programme. (*)

- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

(*) The product does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the product and to its surrounding environment. Laundry should be rearranged and respun.

(**) Regular drum cleaning is not applied. Clean the drum regularly. See Cleaning the Loading Door and the Drum [► 42]



If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorised Service Agent. Never try to repair a non-functional product yourself.



Check the HomeWhiz section for the relevant troubleshooting information.

9 DISCLAIMER / WARNING

Some (simple) failures can be adequately handled by the end-user without any safety issue or unsafe use arising, provided that they are carried out within the limits and in accordance with the following instructions (see the "Self-Repair" section).

Therefore, unless otherwise authorized in the "Self-Repair" section below, repairs shall be addressed to registered professional repairers in order to avoid safety issues. A registered professional repairer is a professional repairer that has been granted access to the instructions and spare parts list of this product by the manufacturer according to the methods described in legislative acts pursuant to Directive 2009/125/EC.

However, only the service agent (i.e. authorized professional repairers) that you can reach through the phone number given in the user manual/warranty card or through your authorized dealer may provide service under the guarantee terms. Therefore, please be advised that repairs by professional repairers (who are not authorized by Grundig) shall void the guarantee.

Self-Repair

Self-repair can be done by the end-user with regard to the following spare parts: door, door hinge and seals, other seals, door locking assembly and plastic peripherals such as detergent dispensers (an updated list is also available in support.grundig.com as of 1st of March 2021) Moreover, to ensure product safety and to prevent risk of serious injury, the mentioned self-repair shall be done following the instructions in the user manual for self-repair or which are available in support.grundig.com For your safety, unplug the product before attempting any self-repair.

Repair and repair attempts by end-users for parts not included in such list and/or not following the instructions in the user manu-

als for self-repair or which are available in support.grundig.com, might give rise to safety issues not attributable to support.grundig.com, and will void the warranty of the product.

Therefore, it is highly recommended that end-users refrain from the attempt to carry out repairs falling outside the mentioned list of spare parts, contacting in such cases authorized professional repairers or registered professional repairers. On the contrary, such attempts by end-users may cause safety issues and damage the product and subsequently cause fire, flood, electrocution and serious personal injury to occur.

By way of example, but not limited to, the following repairs must be addressed to authorized professional repairers or registered professional repairers: motor, pump assembly, main board, motor board, display board, heaters etc.

The manufacturer/seller cannot be held liable in any case where end-users do not comply with the above

The spare part availability of the washing machine or washer-dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the washing machine or washer-dryer properly.